

Digital Storage Oscilloscope

GDS-3000 Series

USER MANUAL



ISO-9001 CERTIFIED MANUFACTURER

GW INSTEK

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Table of Contents

SAFETY INSTRUCTIONS	5
GETTING STARTED.....	10
GDS-3000 Series Overview	11
Appearance	17
Set Up.....	28
QUICK REFERENCE	36
Menu Tree / Operation Shortcuts	38
Default Settings	52
Built-in Help	54
MEASUREMENT	55
Basic Measurement	56
Cursor Measurement	75
Math Operation	81
Applications.....	86
Using Go_NoGo	89
Power Analysis.....	94
Serial Bus	95
CONFIGURATION.....	97
Acquisition	99
Display.....	105
Horizontal View	111
Vertical View (Channel).....	116
Trigger	124
System Info / Language / Clock	141
SAVE/RECALL	145
File Format/Utility	146

Create/Edit file labels.....	150
Save	152
Recall	159
Reference Waveforms	164
FILE UTILITIES	166
PRINT OUT	173
REMOTE CONTROL CONFIG	176
Interface Configuration	177
Web Server.....	183
MAINTENANCE	186
FAQ.....	193
APPENDIX.....	196
GDS-3000 Specifications.....	196
Probe Specifications	201
GDS-3000 Dimensions	203
INDEX.....	205

S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow during operation and storage. Read the following before any operation to insure your safety and to keep the instrument in the best possible condition.

Safety Symbols

These safety symbols may appear in this manual or on the GDS-3000.



WARNING

Warning: Identifies conditions or practices that could result in injury or loss of life.



CAUTION

Caution: Identifies conditions or practices that could result in damage to the GDS-3000 or to other properties.



DANGER High Voltage



Attention Refer to the Manual



Protective Conductor Terminal



Earth (ground) Terminal



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

Safety Guidelines

General Guideline




CAUTION

- Make sure the BNC input voltage does not exceed 300Vrms.
- Never connect a hazardous live voltage to the ground side of the BNC connectors. It might lead to fire and electric shock.
- Do not place any heavy object on the GDS-3000.
- Avoid severe impact or rough handling that leads to damaging the GDS-3000.
- Do not discharge static electricity to the GDS-3000.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan opening.
- Do not perform measurement at a power source or building installation site (Note below).
- Do not disassemble the GDS-3000 unless you are qualified.

(Measurement categories) EN 61010-1:2001 specifies the measurement categories and their requirements as follows. The GDS-3000 falls under category II.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
- Measurement category III is for measurement performed in the building installation.
- Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.
- Measurement category I is for measurements performed on circuits not directly connected to Mains.

Power Supply	<ul style="list-style-type: none"> AC Input voltage: 100 ~ 240V AC, 48 ~ 63Hz, auto selection. Power consumption: 96VA.
 WARNING	<ul style="list-style-type: none"> Connect the protective grounding conductor of the AC power cord to an earth ground, to avoid electrical shock.
Cleaning the GDS-3000	<ul style="list-style-type: none"> Disconnect the power cord before cleaning. Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid. Do not use chemical containing harsh material such as benzene, toluene, xylene, and acetone.
Operation Environment	<ul style="list-style-type: none"> Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below) Relative Humidity: ≤80%, 40°C or below; ≤45%, 41°C ~ 50°C; Altitude: < 2000m Temperature: 0°C to 50°C <p>(Pollution Degree) EN 61010-1:2001 specifies the pollution degrees and their requirements as follows. The GDS-3000 falls under degree 2.</p> <p>Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.</p> <ul style="list-style-type: none"> Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence. Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected. Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.
Storage environment	<ul style="list-style-type: none"> Location: Indoor Temperature: -10°C to 60°C <p>40°C /93% RH 41°C ~60°C /65% RH</p>

Disposal

Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.

Power cord for the United Kingdom

When using the oscilloscope in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons




WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow:	Earth
Blue:	Neutral
Brown:	Live (Phase)



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol  or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

GETTING STARTED

This chapter describes the GDS-3000 in a nutshell, including its main features and front / rear panel introduction. After going through the overview, follow the Set Up section to properly set up the oscilloscope for first-time use. The Set Up section also includes a starter on how to use this manual effectively.



GDS-3000 Series Overview.....	11
Series lineup	11
Main Features	12
Accessories	13
Package Contents	16
Appearance.....	17
GDS-3504/3354/3254/3154 Front Panel	17
GDS-3502/3352/3252/3152 Front Panel	17
Rear Panel.....	23
Display	25
Set Up	28
Tilt Stand	28
Power Up.....	29
First Time Use	30
How to Use This Manual	32

GDS-3000 Series Overview


Series lineup

The GDS-3000 series consists of 8 models, divided into 2-channel and 4-channel versions.


Model name	Frequency bandwidth	Input channels	Real-time Sampling Rate
GDS-3152	150MHz	2	2.5GSa/s
GDS-3252	250MHz	2	2.5GSa/s
GDS-3352	350MHz	2	5GSa/s
GDS-3502	500MHz	2	4GSa/s
GDS-3154	150MHz	4	5GSa/s
GDS-3254	250MHz	4	5GSa/s
GDS-3354	350MHz	4	5GSa/s
GDS-3504	500MHz	4	4GSa/s

The 2 channel and 4 channel models differ in the position of the horizontal controls, the math, reference and bus keys as well as the position of the EXT trigger.

2-Channel models

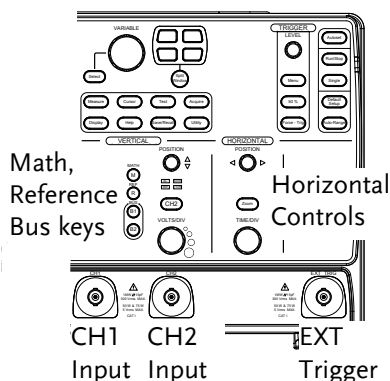

4-Channel models

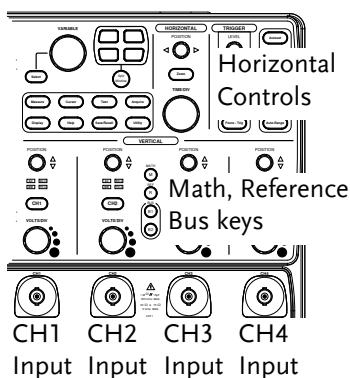

Main Features

Performance

- High sampling rate: up to 5GSa/s real-time (4GSa/s GDS-350X), 100GSa/s equivalent-time
- Deep memory: 25k points record length
- Minimum 2ns peak detection

Features

- 2 and 4 channel models
- Bandwidth up to 500 MHz
- 5GSa/s (200ps resolution) real-time sampling rate (4GSa/s, 250ps resolution for GDS-350X)
- 100GSa/s equivalent sample rate
- VPO waveform processing
- Large 8" 800 x 600 high-resolution TFT LCD
- Unique split window function
- Flexible application modules
- Three standard input impedances

(50Ω/75Ω/1MΩ)

- Optional power measurement functions are available for fast analysis of power quality tests
- Optional analysis software for I²C, SPI and UART serial signal triggering and decoding
- 2 and 4 channel models available up to 500 MHz
- Large 8" color TFT LCD, supporting a large 8 x 10 graticule
- On-screen Help
- 64 MB internal flash memory.
- FreeWave remote control software (free download)

Interface

- USB host port: front and rear panel, for storage devices
- USB slave port(Optional GPIB to USB), RS-232C port: for remote control
- Calibration output
- Go-No Go output
- Trigger output
- Ethernet port

Accessories

Standard Accessories	Part number	Description
		User manual
	N/A region dependent	Power cord
Options	Option Number	Description
	DS3-PWR	Power analysis software
	DS3-SBD	Series Bus analysis software
	GPIB to USB adapter	GPIB Interface

Optional Accessories	Part number	Description
	GTC-001	Instrument cart, 470(W)x430(D)mm (U.S. type input socket)
	GTC-002	Instrument cart, 330(W)x430(D)mm (U.S. type input socket)
	GTL-110	test lead, BNC to BNC heads
	GTL-232	RS-232C cable, 9-pin Female to 9-pin female, Null modem for computer
	GTL-246	USB cable, USB2.0A-B type cable 4P
	GDB-03	Demoboard for the GDS-3000 Series DSO
	GDP-025	25MHz high voltage differential probe
	GDP-050	50MHz high voltage differential probe
	GDP-100	100MHz high voltage differential probe
	GCP-005	5A/ 40Hz~1kHz current probe
	GCP-020	200A/40Hz~10kHz current probe
	GCP-100	100A/DC~100kHz current probe
	GCP-530	50MHz/ 30A current probe
	GCP-1030	100MHz/ 30A current probe
	GCP-206P	Power supply for current probe (2 input channels)
	GCP-425P	Power supply for current probe (4 input channels)
	GTP-151R	Passive probe; 150 MHz,10X with readout
	GTP-251R	Passive probe; 250 MHz, 10X with readout

GTP-351R	Passive probe; 350 MHz, 10X with readout
GTP-501R	Passive probe, 500MHz, 10X with readout


Drivers

USB driver	LabVIEW driver
------------	----------------

Package Contents

Check the contents before using the GDS-3000.

Opening the Box

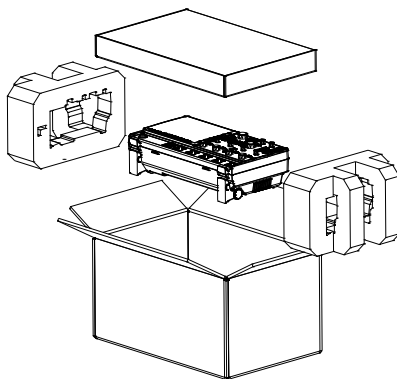

Contents


- Main unit
 - Probe set
 - GTP-151R for GDS-3152 / GDS-3154
 - GTP-251R for GDS-3252 / GDS-3254
 - GTP-351R for GDS-3352 / GDS-3354
 - GTP-501R for GDS-3502 / GDS-3504
 - Power cord
 - User manual (this document)
-

Note


- For detailed probe specifications, see page 201.
- The programming manual, PC software, and USB driver are downloadable from the GW Instek website. Visit www.gwinstek.com, in the oscilloscope section.

Appearance

GDS-3504/3354/3254/3154 Front Panel

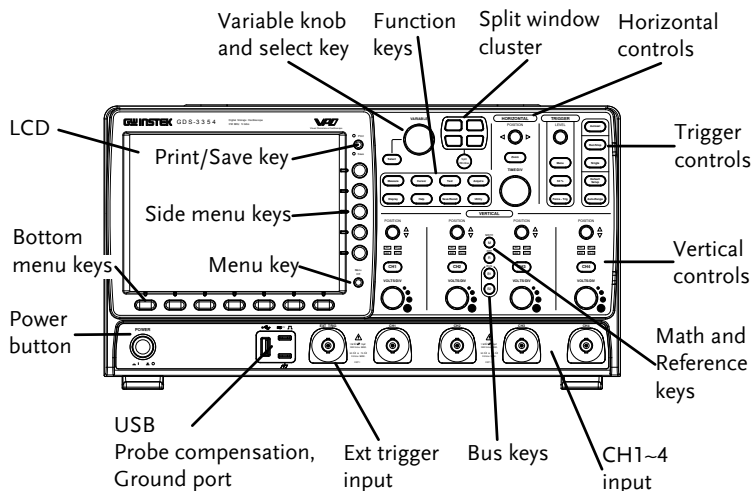

GDS-3502/3352/3252/3152 Front Panel

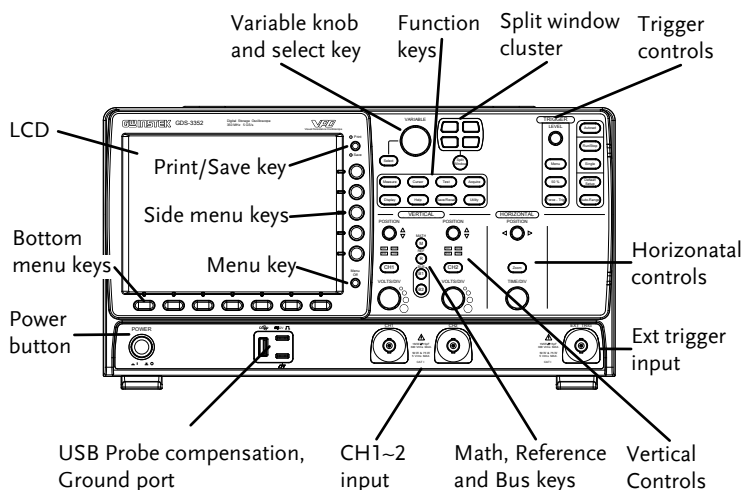

LCD Display 8" SVGA TFT color LCD. 800 x 600 resolution, wide angle view display.

Menu Key **Menu Off** Use the Menu Off key to hide the onscreen menu system.




Side Menu Keys The Side menu and Bottom menu keys are used to make selections from the soft-menus on the LCD user interface.

Bottom Menu Keys

To choose menu items, use the 7 Bottom menu keys located on the bottom of the display panel.

To select a variable or option from a menu, use the Side menu keys on the side of the panel. See page 32 for details.

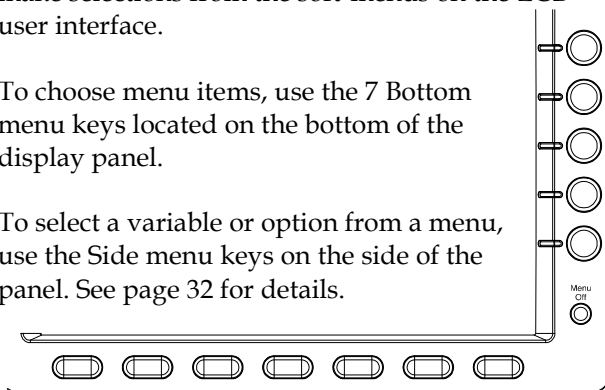

Print/Save Key


○ Print



○ Save

The print/save key is a quick save or quick print key, depending on its configuration. For more information see pages 154(save) or 174(print).


Variable Knob and Select Key

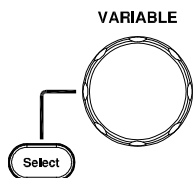

The Variable knob is used to increase/decrease values or to move between parameters.

The select key is used to make selections.

Split Window Cluster

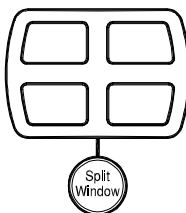

Use the Split Window key to cycle between single and split screen mode. For more details on windowing, see page 65.

Horizontal Controls

The horizontal controls are used to change the position of the cursor, set the time base settings, and to zoom into the waveforms.

Horizontal Position



The Position knob is used to position the waveforms horizontally on the display screen.

Zoom



Press Zoom in combination with the horizontal POSITION knob.

TIME/DIV



The Time/Div knob is used to change the horizontal scale.

Trigger Controls

The trigger controls are used to control the trigger level and options.

Level Knob



Used to set the trigger level.

Trigger Menu Key



Used to bring up the trigger menu.

50% Key























Sets the trigger level to the half way point (50%).

Force - Trig




Press to force an immediate trigger of the waveform.

Autoset		Press the Autoset key to automatically set the trigger, horizontal scale and vertical scale.
Run/Stop Key		Press to freeze (Stop) or continue (Run) signal acquisition (page58).
Single		Sets the acquisition mode to single triggering mode.
Default Setup		Resets the oscilloscope to default settings.
Auto-Range		Sets the oscilloscope range automatically.
Vertical POSITION	POSITION 	Sets the vertical position of the waveform.
Channel Menu Key		Press the CH1~4 key to set the channel.
VOLTS/DIV Knob	VOLTS/DIV 	Sets the vertical scale.
Input Terminals	CH4 	Accepts input signals. Input impedance, selectable: 50Ω, 75Ω, 1MΩ.
Math Key		Use the math key to set and configure math functions.

Reference Key		Press the Reference key to set or remove reference waveforms.
BUS Keys		The Serial bus decode keys are used for UART, I ² C and SPI serial bus interface decoding. The serial bus decode function is an optional extra. See page 94 for details.
Function Keys	The Function Keys are used to enter and configure different functions on the GDS-3000.	
Measure		Configures and runs automatic measurements.
Cursor		Configures and runs cursor measurements.
Test		Configures and runs GW Instek applications and optional functions such as the Power Analysis measurement software.
Acquire		Configures the Acquisition mode.
Display		Configures the display settings.
Help		Shows the Help menu.
Save/Recall		Used to save and recall waveforms, images and panel settings.
Utility		Configures the print/save key, display time, language and calibration.

USB Host Port



TypeA, 1.1/2.0 compatible. Used for data transfer.

Ground Terminal



Accepts the DUT ground lead for common ground.

Probe Compensation Output



Outputs 2Vp-p, square wave signal for probe compensation (page 190).

External Trigger Input




Accepts external trigger signals (page 124).

Input impedance: $1M\Omega \pm 3\%$,
Voltage input: $\pm 15V$ (peak), EXT trigger capacitance: $\sim 16pF$.

Power Switch




Used to turn the power on/off.

 I: ON

 O: OFF

Rear Panel

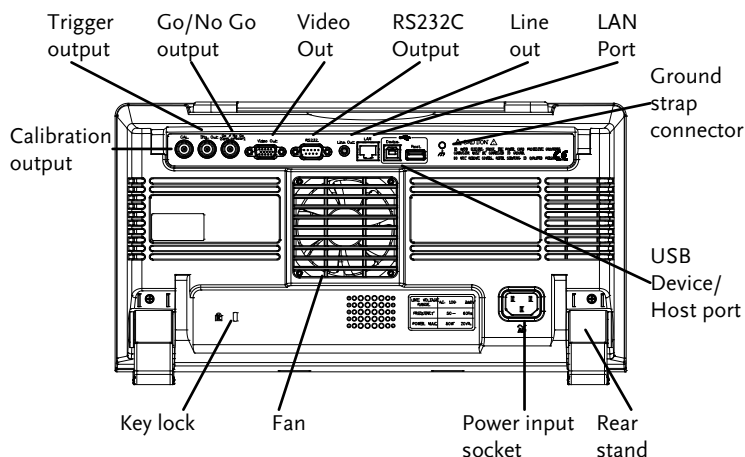

Calibration
Output



Outputs the signal for vertical scale accuracy calibration (page 186).

Trigger Output



Outputs the trigger timing.

Go-No Go
Output




Outputs Go-No Go test results (page 86) as 500us pulse signal.

Video Out



Outputs SVGA resolution to an external display.

RS232



RS232 remote control.

Line Out



Audio line out.

LAN Port



Ethernet port.

Ground Strap
Connector



For use with a grounding strap.

USB Device Port



The USB device port is used for remote control and for the FreeWave remote control software. USB 1.1/2.0 high speed compatible.

USB Host




The USB host port supports USB flash drives for external memory. USB 1.1/2.0 high speed compatible.

Security Slot



Kensington security slot compatible.


Power Input
Socket

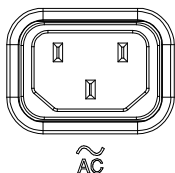

Power cord socket accepts AC mains, 100 ~ 240V, 50/60Hz.

For power up sequence, see page 29.

Display

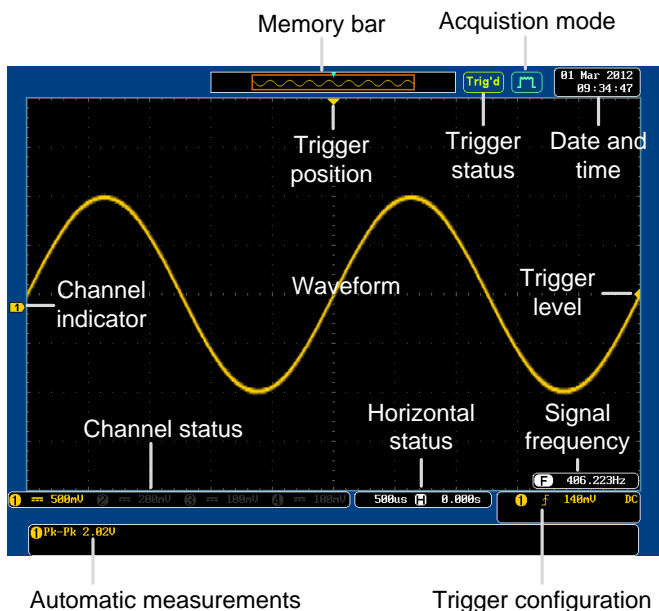

Waveforms

Shows input signal waveforms.

Channel 1: Yellow

Channel 2: Blue

Channel 3: Pink

Channel 4: Green

Channel Indicator

The channel indicator shows the zero volt level of the signal waveform for each activated channel. The active channel is shown with a solid color.



Math



Bus (B1)



Active channel
(CH3)



Reference waveform
(Ref1)



Activated channel
(CH4)


Trigger Position

Shows the position of the trigger.

Horizontal Status


Shows the horizontal scale and position.

Date and Time



Current date and time (page 143).

Memory Bar



The ratio and the position of the displayed waveform compared with the internal memory (page 111).

Trigger Status



Triggered.



Not triggered, display not updated.



Trigger stopped. Also appears in Run/Stop (page 58).



Roll mode.



Auto trigger mode.

For trigger details, see page 124.

Acquisition Mode



Normal mode



Peak detect mode




Hi Resolution



Average mode

For acquisition details, see page 99.





Signal Frequency



Shows the trigger source frequency.



Indicates the frequency is less than 2Hz (lower frequency limit).


Trigger Configuration		Trigger source, slope, voltage, coupling.
		Trigger source, trigger (video), field, line, coupling.
For trigger details, see page 124.		
Channel Status		Channel 1, inverted, AC coupling, 1V/Div
		Channel 1, GND coupling, 1V/Div
For channel details, see page 116.		

Set Up

Tilt Stand


Upright

Turn the legs under the casing as shown below to have the instrument sit upright.

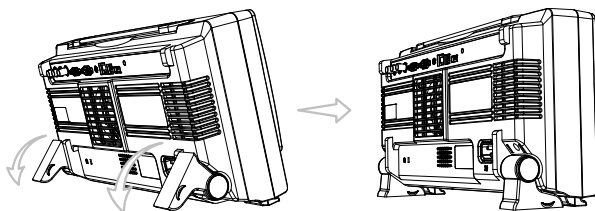

Tilt


To tilt, tilt the legs back behind the casing, as shown below.

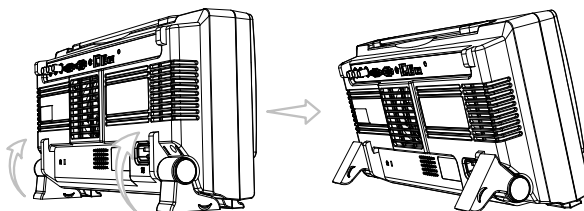


Power Up

Step

1. Connect the power cord to the rear panel socket.

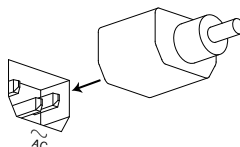

2. Press the POWER key. The display becomes active in ~ 30 seconds.



■ I: ON

■ ○: OFF

Note

The GDS-3000 recovers the state right before the power is turned OFF. The default settings can be recovered by pressing the Default key on the front panel. For details, see page 159.

First Time Use

Background This section describes how to connect a signal, adjust the scale, and compensate the probe. Before operating the GDS-3000 in a new environment, run these steps to make sure the instrument performs at its full potential.

1. Power On Follow the procedures on the previous page.

2. Set the Date and Time Set the date and time. Page 143


3. Reset System Reset the system by recalling the factory settings. Press the *Default Setup* key on the front panel. For details, see page 159.

Default
Setup

4. Install Optional Software The optional software packages (Power Analysis, Serial Bus Decode) can be activated. Page 191

5. Connect Probe Connect the probe to the CH1 input terminal and probe compensation signal output (2Vp-p, 1kHz square wave).


Set the probe attenuation to x10 if the probe has adjustable attenuation.

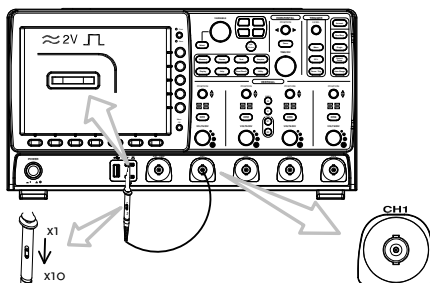

6. Capture Signal (Autoset)

Press the *Autoset* key. A square waveform appears on the center of the screen. For Autoset details, see page 57.


Autoset

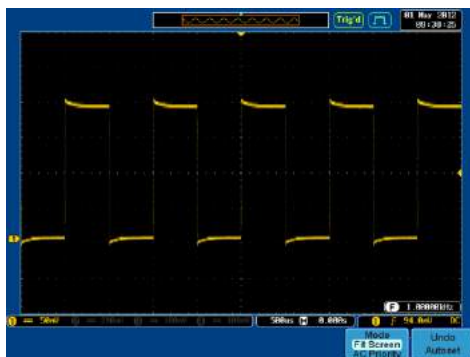

7. Select Vector Waveform

Press the *Display* key, and set the display to *Vector* on the bottom menu.


Display




Dot Vector

8. Compensate Probe


Turn the adjustment point on the probe to make the square waveform edge flat.

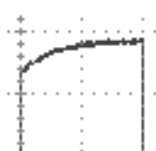


Under Compensation

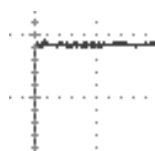

Normal

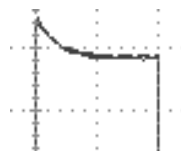

Over Compensation

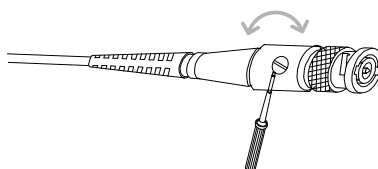

9. Start Operation Continue with the other operations.

Measurement: page 55	Configuration: page 86
Save/Recall page 145	File Utilities page 165
Print Out 173	Remote Control page 176

How to Use This Manual

Background


This section describes the conventions used in this manual to operate the GDS-3000.

Throughout the manual any reference to pressing a menu key refers to the keys directly below or beside any menu icons or parameters.


When the user manual says to “toggle” a value or parameter, press the corresponding menu item. Pressing the item will toggle the value or parameter.

Active parameters are highlighted for each menu item. For example in the example below, Coupling is currently set to DC.

If a menu item can be toggled from one value or parameter to another, both options will be visible, with the current option highlighted. In the example below the slope can be toggled from a rising slope to a falling slope.

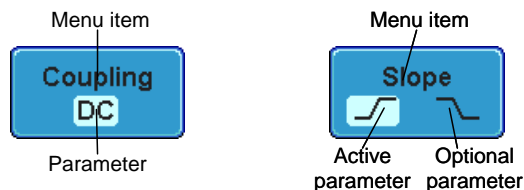


Selecting a Menu Item or Parameter When the user manual says to “select” a value from one of the side menu parameters, first press the corresponding menu key and use the variable knob to scroll through a parameter list or to increase or decrease a variable.

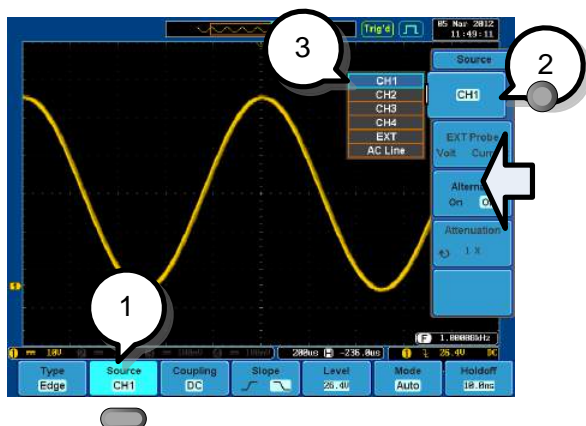


Example


1. Press a bottom menu key to access the side menu.




2. Press a side menu key to either set a parameter or to access a sub menu.




3. If accessing a sub menu or setting a variable parameter, use the variable knob to scroll through menu items or variables. Use the select key to confirm and exit.

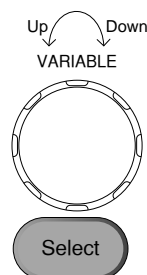


4. Press the same bottom menu key again to reduce the side menu.




Toggling a Menu Parameter

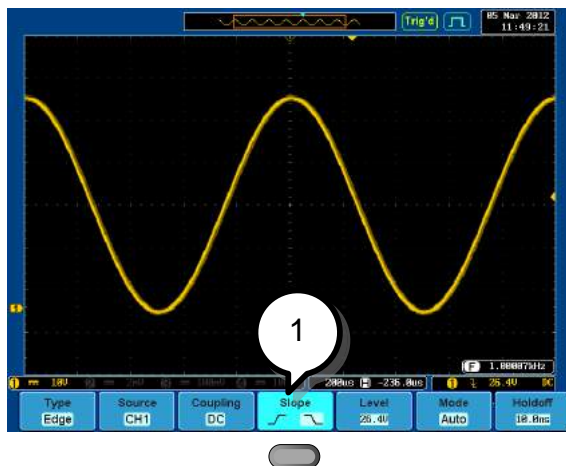


1. Press the bottom menu key to toggle the parameter.




Reduce Lower Menu

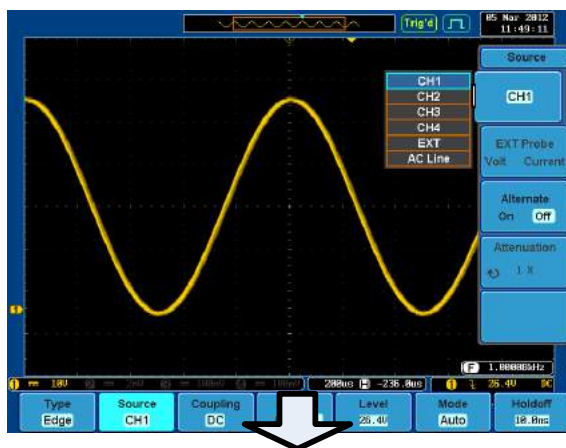


1. Press the relevant function key again to reduce the bottom menu. For example: press the trigger menu key to reduce the trigger menu.

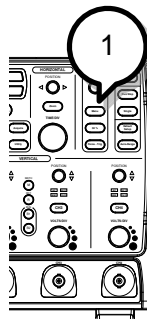

Remove All
Menus

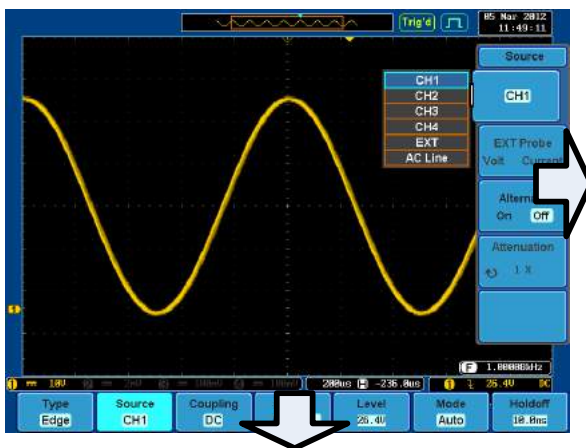

1. Press the Menu Off key to reduce each menu level.

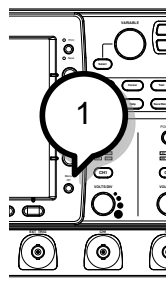

QUICK REFERENCE

This chapter describes the GDS-3000 menu tree, shortcuts to major operations, built-in Help access, and default factory settings. Use them as a handy reference to get a quick access to the functionality.

Menu Tree / Operation Shortcuts	38
Convention.....	38
Acquire Key	39
Autoset Key	39
Auto-Range	40
CH1 ~ 4 Key	40
Cursor Key	41
Display Key	41
Help Key.....	41
Math Key	42
Measure Key	43
Print/Save Key.....	44
Run/Stop Key	44
REF Key.....	44
Save/Recall Key	45
Test Key.....	46
Test Key – Go-NoGo.....	46
Trigger Type Menu	47
Trigger Edge Menu	47
Trigger Delay Menu.....	47
Trigger Pulse Width Menu	48
Trigger Video Menu	48
Trigger Pulse Runt Menu.....	49
Trigger Rise & Fall Menu	49
Utility Key	50
Utility Key – I/O	50
Utility Key – File Utilities	51
Zoom Key	51
Default Settings	52

Built-in Help	54
---------------------	----


Menu Tree / Operation Shortcuts

Convention


For all menu trees, bottom menu keys are shown as grey icons and side menu keys are shown in white. All menu tree operations are shown in order from top to bottom.

Below is an example of the menu tree operation for the trigger source menu and a comparison to the operation on the DSO screen.

Menu Tree

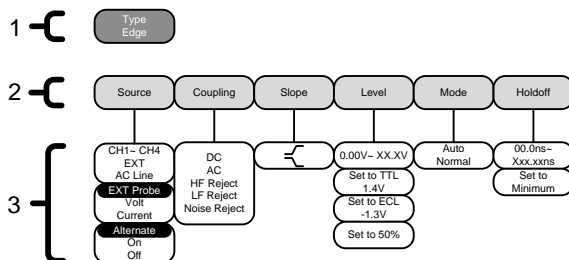


On Screen Menu

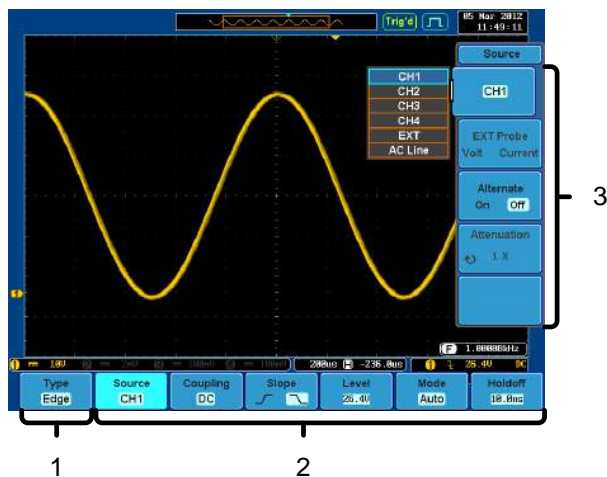

Acquire Key

Sets the acquisition mode.

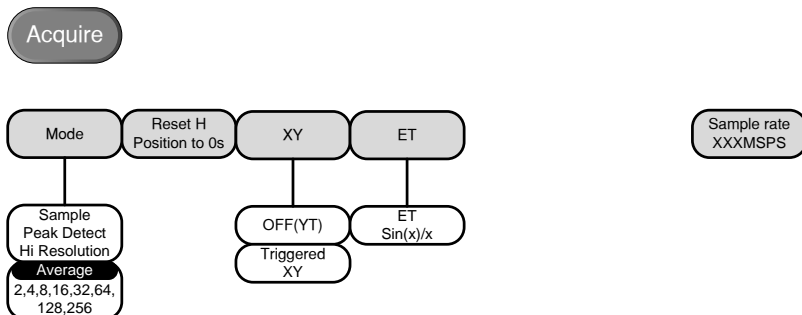


Autoset Key

Automatically finds the signal and sets the horizontal and vertical scale.




Auto-Range

Constantly adjusts the vertical and or horizontal scale.

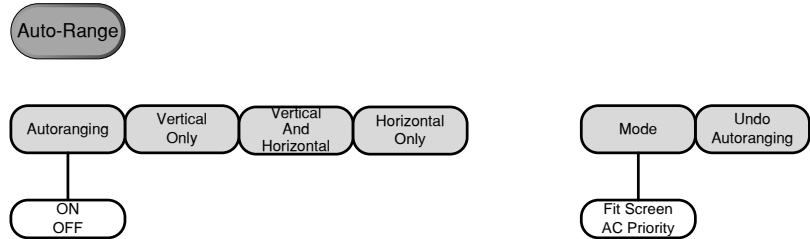


CH1 ~ 4 Key

Set the channel input parameters.

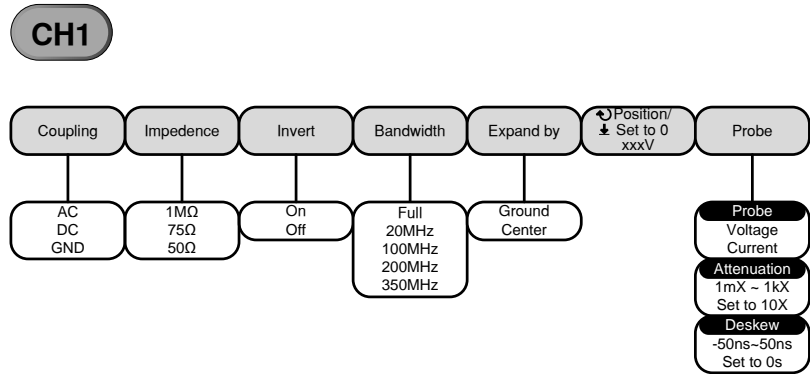


Cursor Key

Set cursor positions.

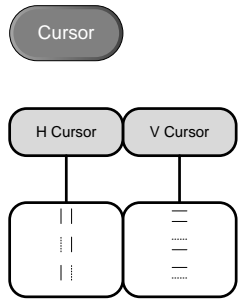

Display Key

Set the display properties.

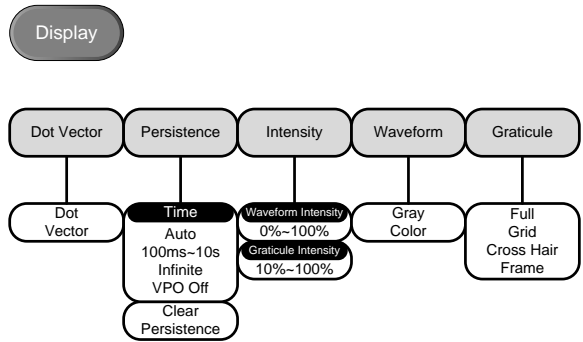

Help Key


Turn help mode On/Off.



Math Key




Standard math and FFT functions.

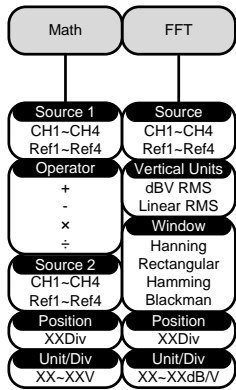

Measure Key

Display automatic measurements either individually or as voltage/current, time or delay measurement groups.

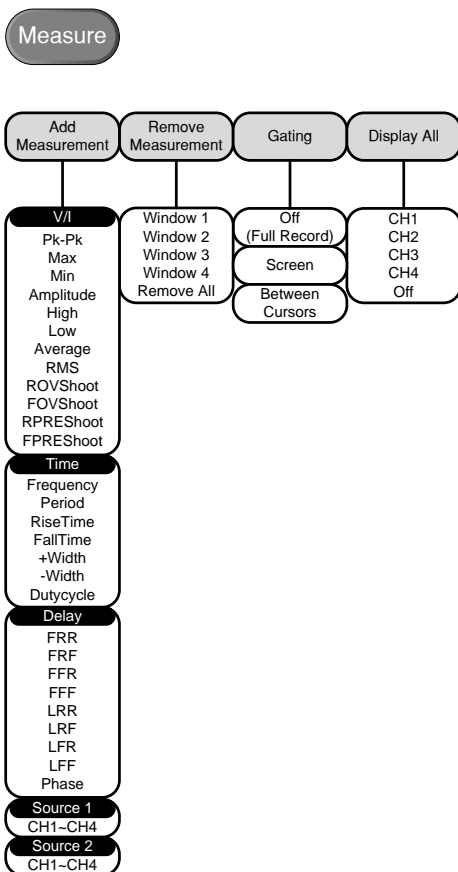

Print/Save Key

☐ Print Print or save screen images.




☐ Save

Run/Stop Key




Freeze/unfreeze signal acquisition

REF Key

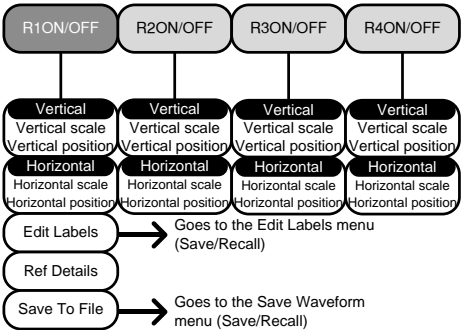


Save/Recall Key

Save and recall images, waveforms and panel setups. Edit labels for reference and setup files.

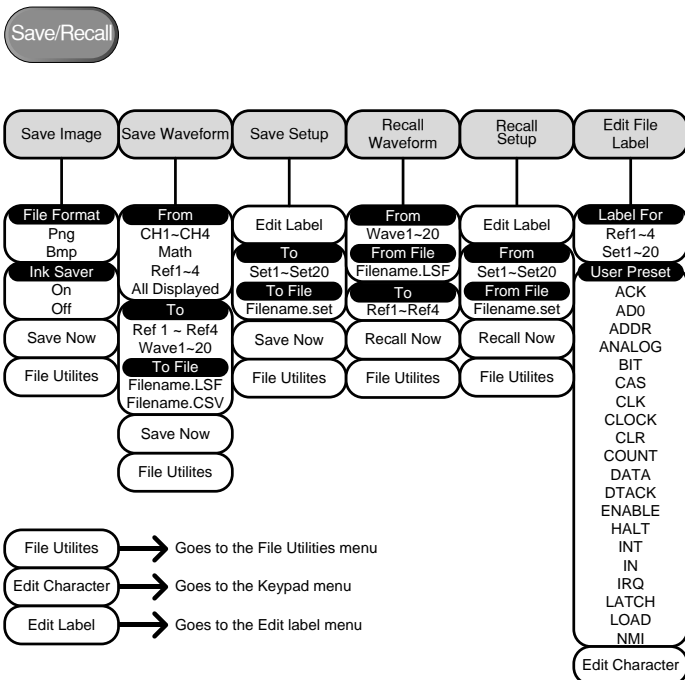


Test Key


Use the Go-NoGo application as well as additional optional software such as the Power Analysis software.

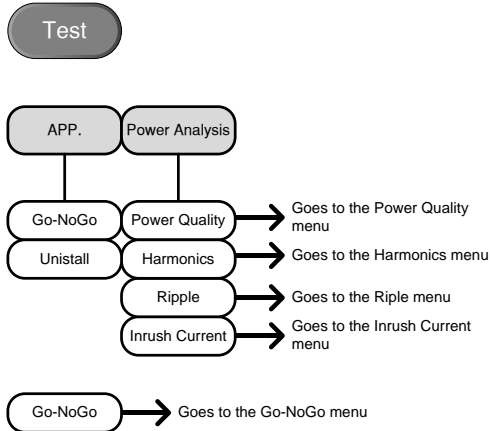


Test Key – Go-NoGo

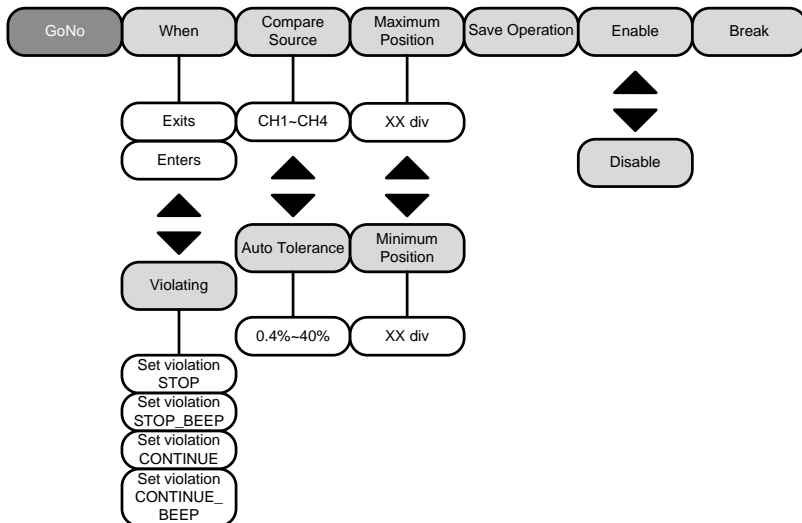


Trigger Type Menu

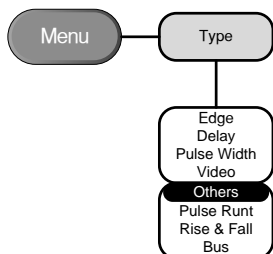


Trigger Edge Menu

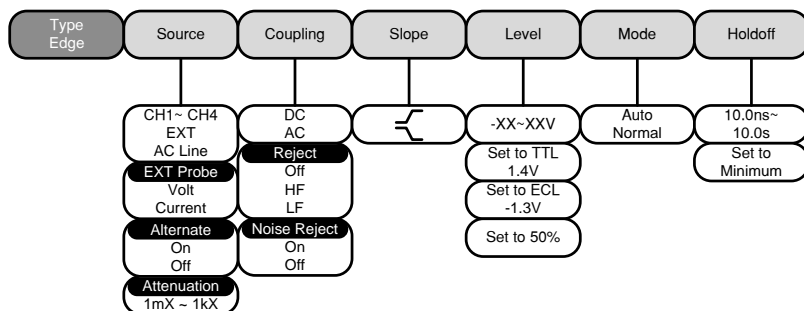


Trigger Delay Menu

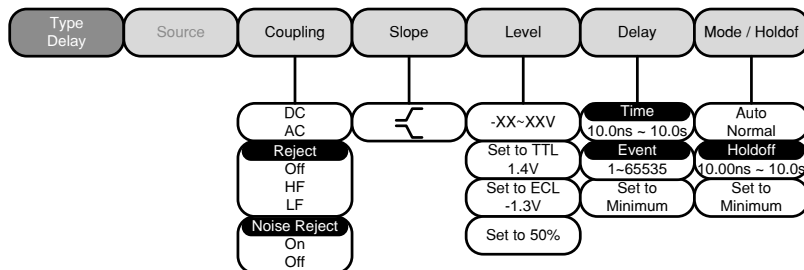


Trigger Pulse Width Menu

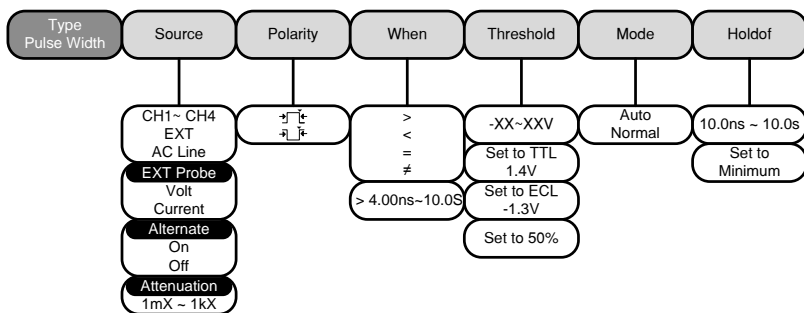


Trigger Video Menu

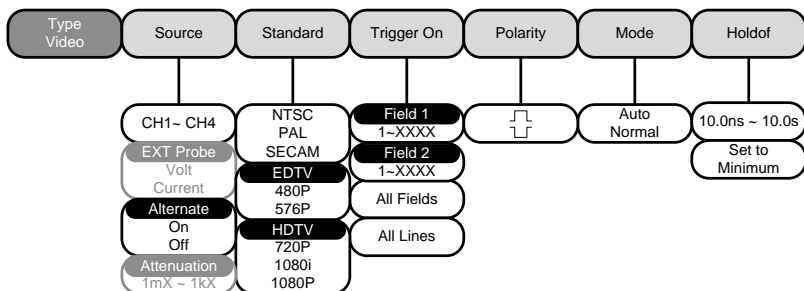


Trigger Pulse Runt Menu

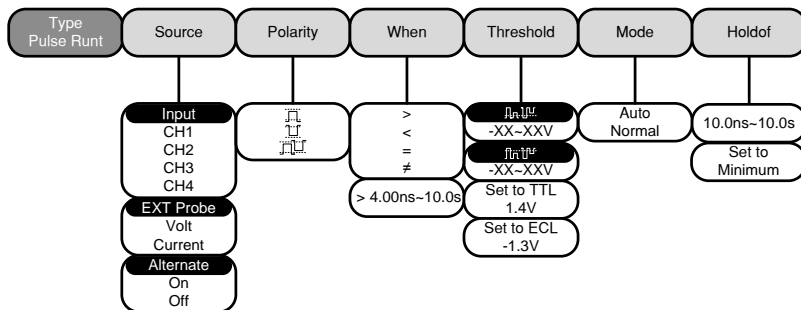


Trigger Rise & Fall Menu

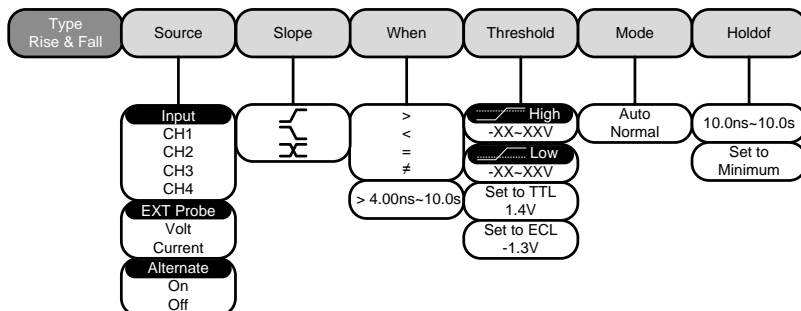


Utility Key

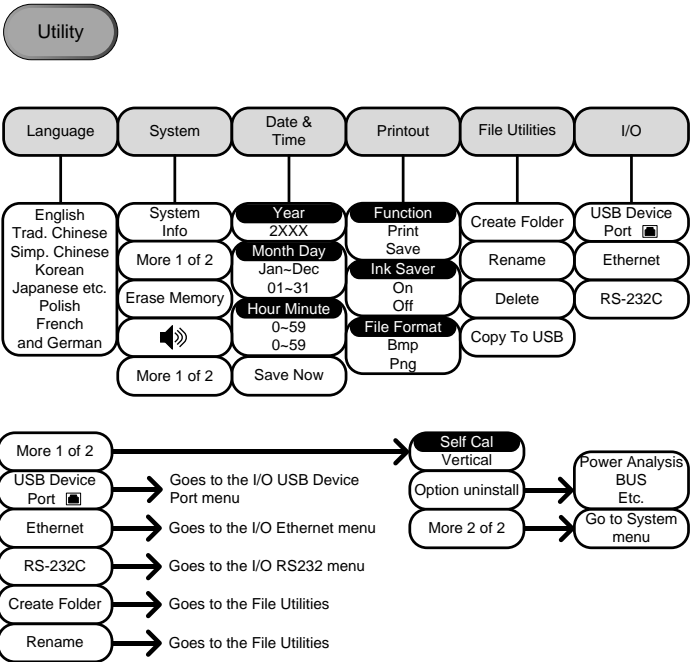


Utility Key – I/O

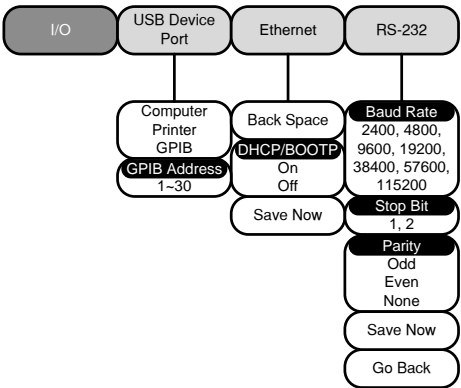

Utility Key – File Utilities

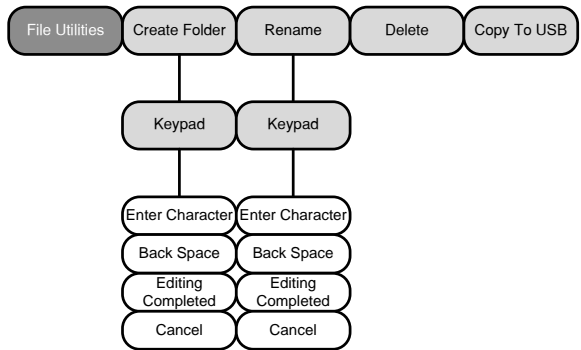


Zoom Key

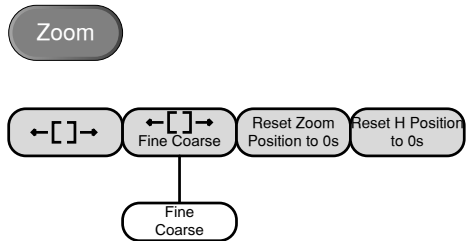

Default Settings

The default factory installed settings can be recalled at any time by pressing the *Default Setup* key.



Acquire	Mode: Sample	XY: OFF
	Interpolation: Sin(x)/x	Sample rate: 250MSPS (200MSPS GDS350X)
Display	Mode: Vector	Persistence: Auto
	Waveform intensity: 50%	Graticule intensity: 50%
	Waveform visuals: Gray	Graticule: full 
Channel	Scale: 100mV/Div	CH1: On
	Coupling: DC	Impedance: 1MΩ
	Invert: Off	Bandwidth: full
	Expand: By ground	Position: 0.00V
	Probe: voltage	Probe attenuation: 1x
	Deskew: 0s	
Cursor	Horizontal cursor: Off	Vertical Cursor: Off
Measure	Source1: CH1	Source2: CH2
	Gating: Off	Display: Off
Horizontal	Scale: 10us/Div	
Math	Source1: CH1	Operator: +
	Source2: CH2	Position: 0.00 Div
	Unit/Div: 200mV	Math Off
Test	App: Go-NoGo	
Trigger	Type: Edge	Source: CH1
	Coupling: DC	Alternate: Off
	Rejection: Off	Noise Rejection: Off

	Slope: positive	Level: 0.00V
	Mode: Auto	Holdoff: 10.0ns
Utility	Print key: Save	Ink Saver: Off
Save Recall	Image file format: Bmp	Data file format: LSF

Built-in Help

The Help key accesses a context sensitive help menu. The help menu contains information on how to use the front panel keys.

- Panel Operation
1. Press the *Help* key. The display changes to Help mode.



2. Use the Variable knob to scroll up and down through the Help contents. Press *Select* to view the help on the selected item.



- Home Key
- Press the *Home* key to return to the main help screen.



- Go Back
- Press the *Back* key to go to the previous menu page.



- Exit
- Press the *Help* key again or press the *Exit* key to exit the Help mode.



M EASUREMENT

Basic Measurement	56
Channel Activation	56
Autoset.....	57
Auto-Range	59
Run/Stop.....	61
Horizontal Position/Scale.....	62
Vertical Position/Scale.....	64
Split Window Mode.....	65
Automatic Measurement	67
Measurement Items	67
Individual Mode.....	70
Remove Measurement	71
Gated mode	72
Display All mode.....	73
Cursor Measurement	75
Use Horizontal Cursors	75
Use Vertical Cursors.....	78
Math Operation	81
Overview	81
Addition/Subtraction/Multiplication/Division.....	82
FFT.....	84
Applications	86
Overview	86
Running Applications.....	86
Uninstalling Applications	87
Using Go_NoGo	89
Power Analysis	94
Power Analysis Overview.....	94
Serial Bus	95
Serial Bus Overview	95

Basic Measurement


This section describes the basic operations required in capturing and viewing the input signal. For more detailed operations, see the following chapters.

- Cursor Measurement → from page 75
- Configuration → from page 86

Before operating the oscilloscope, please see the Getting Started chapter, page 10.

Channel Activation

Activate Channel To activate an input channel, press a *channel* key.



When activated, the channel key will light up. The corresponding channel menu will also appear.


Each channel is associated with the color shown beside the VOLTS/DIV dial: CH1: yellow, CH2: blue, CH3: pink and CH4: green.


When a channel is activated, it is shown above the bottom menu system.



De-activate Channel

To de-activate a channel, press the corresponding *channel* key again. If the channel menu is not open, press the *channel* key twice (the first press shows the Channel menu).




Default Setup	To activate the default state, press <i>Default Setup</i> .	
---------------	---	---


Autoset	The <i>Autoset</i> key (page 57) does NOT automatically activate the channels to which input signals are connected.
---------	---

Autoset


Background	<p>The Autoset function automatically configures the panel settings to position the input signal to the best viewing condition. The GDS-3000 automatically configures the following parameters.</p> <ul style="list-style-type: none"> • Horizontal scale • Vertical scale • Trigger source channel <p>There are two operating modes for Autoset function: Fit Screen Mode and AC Priority Mode. Fit Screen Mode will fit the waveform to the best scale, including any DC components (offset). AC priority mode will scale the waveform to the screen removing any DC component.</p>
------------	--

Panel Operation	<ol style="list-style-type: none"> 1. Connect the input signal to the GDS-3000 and press the <i>Autoset</i> key. 2. The waveform appears in the center of the display. 	
-----------------	--	---

Before

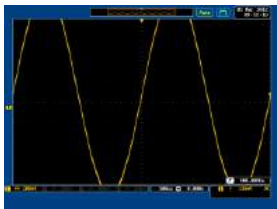

After

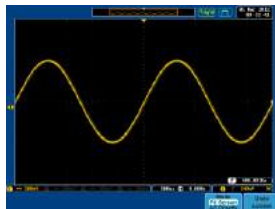

3. To undo Autoset, press *Undo Autoset* from the bottom menu. To remove the *Undo Autoset* softkey, press any other key.

Undo
Autoset

Change modes


1. Choose between *Fit Screen Mode* and *AC Priority Mode* from the bottom menu.

Mode
Fit Screen
AC Priority

2. Press the *Autoset* key again to use Autoset in the new mode.

Autoset

Fit Screen Mode

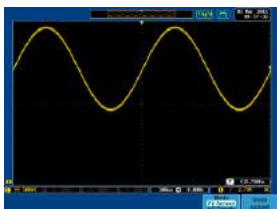

AC Priority



Limitation

Autoset does not work in the following situations.

- Input signal frequency is less than 20Hz
- Input signal amplitude is less than 30mV

Auto-Range

Background

The Auto-Range function works similarly to the Autoset function, except the Auto-Range function works continuously when it is on. The Auto-Range function will continuously monitor the input signal and adjust the horizontal and vertical scale of a displayed signal so that waveform(s) are displayed at the best possible scale.


In addition, the Auto-Range function can also be configured to only adjust the vertical or horizontal scale.

There are two operating modes for the Auto-Range function: Fit Screen Mode and AC Priority Mode.

Fit Screen Mode will fit the waveform to the best scale, including any DC components (offset). AC priority mode will scale the waveform to the screen removing any DC component.


Panel Operation

1. After a signal has already been triggered, press the *Auto-Range* key. The Auto-Range key lights up.










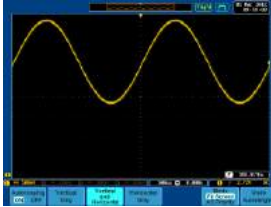
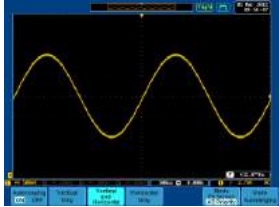
2. The waveform appears in the center of the display.

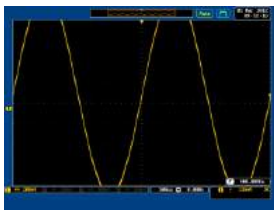Before



After



	3. To undo Auto-Range, press <i>Undo Autoranging</i> from the bottom menu.	
Disable Auto-Range	Press <i>Autoranging</i> from the bottom menu to turn Auto-Range On/Off.	
Configure Auto-Range	Press <i>Vertical Only</i> for vertical autoranging only.	
	Press <i>Horizontal Only</i> for horizontal autoranging only.	
	Press <i>Horizontal and Vertical</i> for autoranging on both axes.	
Change modes	1. Choose between <i>Fit Screen Mode</i> and <i>AC Priority Mode</i> from the bottom menu.	
	2. Press the <i>Auto-Range</i> key twice to reset the Auto-Range function.	
	x2	
	Fit Screen Mode	AC Priority
		

- Limitation
- Auto-Range does not work in the following situation.
- Input signal frequency is less than 20Hz
 - Input signal amplitude is less than 30mV

Run/Stop

Background By default, the waveform on the display is constantly updated (Run mode). Freezing the waveform by stopping signal acquisition (Stop mode) allows flexible observation and analysis. To enter Stop mode, two methods are available: pressing the Run/Stop key or using the Single Trigger mode.

Stop mode icon When in Stop mode, the Stop icon appears at the top of the display.



Triggered icon



Freeze Waveform by Run/Stop Key Press the *Run/Stop* key once. The waveform and signal acquisition freezes. To unfreeze, press the *Run/Stop* key again.



Freeze Waveform by Single Trigger Mode In the Single Trigger mode, the waveform always stays in the Stop mode, and is updated only when the *Single* key is pressed. When the *single* key is pressed, the Run/Stop key turns red. For details, see page 124.



Waveform Operation The waveform can be moved or scaled in both Run and Stop mode, but in different manners. For details, see page 111 (Horizontal position/scale) and page 116 (Vertical position/scale).

Horizontal Position/Scale


For more detailed configuration, see page 111.

Set Horizontal Position

The horizontal position knob moves the waveform left and right.



As the waveform moves, the memory bar on the top of the display indicates the portion of the waveform currently shown on the display and the position of the horizontal marker on the waveform.




Position Indicator The horizontal position is shown at the bottom of the display grid to the right of H icon.



Select Horizontal Scale

To select the timebase (scale), turn the *TIME/DIV* knob; left (slow) or right (fast).

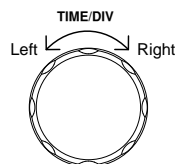


Range

1ns/div ~ 100s/div, 1-2-5 increments
(1-2.5-5 for GDS350X).


The Time/Division rate is displayed to the left of the H icon at the bottom of the screen.




Memory bar The size of the memory bar changes to reflect the timebase and the section of the waveform that is displayed on screen.

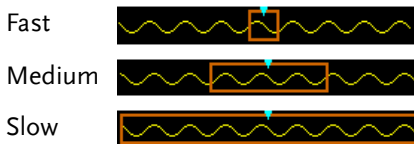

The Sample rate changes according to the time/division. For example the sample rate of the GDS-3304 at different time bases is shown below.

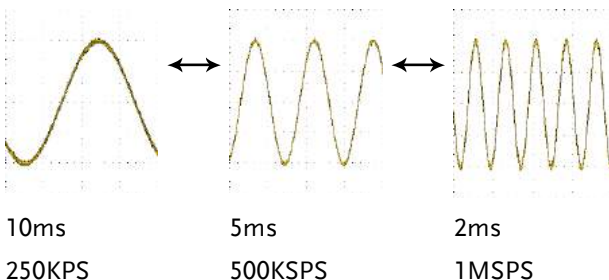

Stop mode In the Stop mode, the waveform size changes according to the scale.




Vertical Position/Scale

For more detailed configuration, see page116.

Set Vertical Position

To move the waveform up or down, turn the *vertical position knob* for each channel.

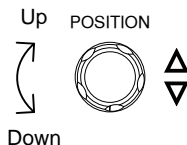

As the waveform moves, the vertical position of the cursor appears on the display.


Position = 1.84mV

Run/Stop mode

The waveform can be moved vertically in both Run and Stop mode.

Select Vertical Scale

To change the vertical scale, turn the *VOLTS/DIV* knob; left (down) or right (up).

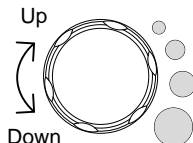

Range 2mV/div ~ 1V/div (50Ω/75Ω)/,
2mV/div ~ 5V/div (1MΩ)
1-2-5 increments

The vertical scale indicator for each channel on the bottom of the display changes accordingly.




Split Window Mode

The split window mode is able to display and trigger each active channel independently. The split window mode is especially useful for signal comparisons. Reference waveforms can also be used in this mode. Most functions and features can be used with split screen mode except for the Math, XY display and Zoom mode.

Enter Split Screen Mode

1. Activate each channel that is to be used in the split screen mode.



2. Press the *Split Window* key to enter the split screen mode.



3. Split window mode appears. The number of windows depends on the number of active channels. 1-2 active channels will produce 2 split windows, while 3-4 active channels will produce 4 split windows.

The split window that has the active channel is shown with an orange border.

Example

4 channel split window



2 channel split window





Select Active Channel

To select the active channel, press the corresponding split window key:

4 Window split screen:


2 window split screen:

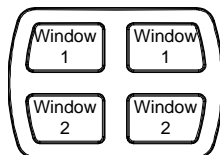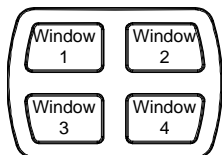

Reference Waveforms

Reference waveforms can also be used in this mode. Each reference waveform will be recalled to the corresponding split window number. I.e., Ref1 will be recalled to the first split window, Ref2 to the second window and so on.

Use Active Channel Settings

To return to full screen mode using the settings of the active channel, press the  button.



Exit Split Window mode





























To exit split window mode, press the *Split Window* key again.















Automatic Measurement








The automatic measurement function measures and updates major items for Voltage/Current, Time, and Delay type measurements.










Measurement Items

	V/I Measurements	Time Meas.	Delay Meas.			
Overview	Pk-Pk		Frequency		FRR	
	Max		Period		FRF	
	Min		RiseTime		FFR	
	Amplitude		FallTime		FFF	
	High		+Width		LRR	
	Low		-Width		LRF	
	Average		Dutycycle		LFR	
	RMS				LFF	
	ROVShoot				Phase	
	FOVShoot					
	RPREShoot					
	FPREShoot					

Voltage/Current Measurement	Pk-Pk (peak to peak)		Difference between positive and negative peak voltage (= $V_{max} - V_{min}$)
	Max		Positive peak voltage
	Min		Negative peak voltage
	Amplitude		Difference between global high and global low voltage (= $V_{hi} - V_{lo}$)

High		Global high voltage
Low		Global low voltage
Average		Averaged voltage of the first cycle
RMS		RMS (root mean square) voltage
ROVShoot		Rise overshoot voltage
FOVShoot		Fall overshoot voltage
RPREShoot		Rise preshoot voltage
FPREShoot		Fall preshoot voltage

Time Measurement	Frequency		Frequency of the waveform
	Period		Waveform cycle time (=1/Freq)
	RiseTime		Rising time of the pulse (~90%)
	FallTime		Falling time of the pulse (~10%)
	+Width		Positive pulse width
	-Width		Negative pulse width
	Duty Cycle		Ratio of signal pulse compared with whole cycle =100x (Pulse Width/Cycle)

Delay Measurement	FRR		Time between: Source 1 first rising edge and Source 2 first rising edge
	FRF		Time between: Source 1 first rising edge and Source 2 first falling edge
	FFR		Time between: Source 1 first falling edge and Source 2 first rising edge
	FFF		Time between: Source 1 first falling edge and Source 2 first falling edge
	LRR		Time between: Source 1 last rising edge and Source 2 last rising edge
	LRF		Time between: Source 1 last rising edge and Source 2 last falling edge
	LFR		Time between: Source 1 last falling edge and Source 2 last rising edge
	LFF		Time between: Source 1 last falling edge and Source 2 last falling edge
Phase			The phase difference of two signals, calculated in degrees. $T1 \div T2 \times 360$.

Individual Mode

Individual mode shows up to eight selected measurement items on bottom of the screen from any channel source.

Add
Measurement
Item


1. Press the *Measure* key.

Measure

2. Press *Add Measurement* from the bottom menu.

Add
Measurement

3. Choose either a *V/I*, *Time* or *Delay* measurement from the side menu.

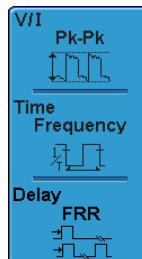


V/I (Voltage/ Current)	Pk-Pk, Max, Min, Amplitude, High, Low, Average, RMS, ROVShoot, FOVShoot, RPRESshoot, FPRESshoot
Time	Frequency, Period, RiseTime, FallTime, +Width, -Width, Duty Cycle
Delay	FRR, FRF, FFR, FFF, LRR, LRF, LFR, LFF, Phase

4. All individual measurements will be displayed in a window on the bottom of the screen. The channel number and channel color indicate the measurement source: yellow = CH1, blue = CH2, pink = CH3, green = CH4.

① Min	-3.92U	① Amplitude	2.39kV	① High
① Low	-3.76V	①② FRF	296.9us	①② FFR

Choose a Source The channel source for measurement items can be set either before or when selecting a measurement item.

1. To set the source, press either the *Source1* or *Source2* key from the side menu and choose the source. Source 2 is only for delay measurements.

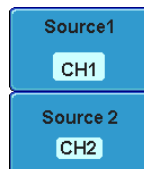

Range CH1, CH2, CH3, CH4

Split Window Mode Individual mode can be used with the split window mode. Each individual measurement will be displayed in the split window that houses the source of the measurement.


Delay measurements are not supported as only one source can be used for each measurement in split window mode.

Remove Measurement

Individual measurements can be removed at any time using the Remove Measurement function.

Remove Measurement Item


1. Press the *Measure* key.



2. Press *Remove Measurement* from the bottom menu.



3. Choose which measurement window (if in split window mode) the item is located in (*Window 1~4*) and use the variable knob to remove an item.




Remove All Items Press *Remove All* to remove all the measurement items in full screen mode, or to remove all the measurement items for the active window in split screen mode.



Gated mode

Some automatic measurements can be limited to a “gated” area between cursors. Gating is useful for measuring a magnified waveform or when using a fast time base. The Gated mode has three possible configurations: Off (Full Record), Screen and Between Cursors.


Set Gating Mode 1. Press the *Measure* key.



2. Press *Gating* from the bottom menu.



3. Choose one of the gating modes from the side menu: *Off (Full Record)*, *Screen*, *Between Cursors*

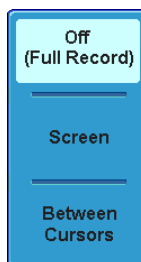

Cursors On Screen

If *Between Cursors* is selected, the cursor positions can be edited by using the cursor menu.

Page 75

Display All mode

Display All mode shows and updates all items from Voltage and Time type measurements.

View
Measurement
Results

1. Press the *Measure* key.

Measure

2. Press *Display All* from the bottom menu.

Display All
OFF

3. Choose a channel (*CH1*, *CH2*, *CH3*, *CH4*) from the side menu to display auto measurement items.

Note: only the channels that are activated are available.

4. The results of Voltage and Time type measurements appear on the display.



Remove
Measurements

To remove the measurement results, press *OFF*.

OFF

Delay
Measurements

Delay type measurement is not available in this mode as only one channel is used as the source. Use the Individual measurement mode (page 70) instead.

Cursor Measurement


Horizontal or vertical cursors are used to show the position and values of waveform measurements and math operation results. These results cover voltage, time, frequency and other math operations. When the cursors (horizontal, vertical or both) are activated, they will be shown on the main display unless turned off. (page 110).

Use Horizontal Cursors


Panel Operation/ Range 1. Press the *Cursor* key once.



2. Press *H Cursor* from the bottom menu.



3. Press *H Cursor* repeatedly to toggle the cursor type.



Range

:	Left cursor (1) movable, right cursor position fixed
:	Right cursor (2) movable, left cursor position fixed
	Left and right cursor (1+2) movable together

4. The cursor position information appears on the top left hand side of the screen


1	-416us	-200mV
2	376us	-200mV
	Δ 792us	Δ 0.00V

Cursor 1 Time, Voltage/Current


Cursor 2 Time, Voltage/Current

Δ Delta (difference between cursors)

5. Use the *Variable knob* to move the movable cursor(s) left or right.

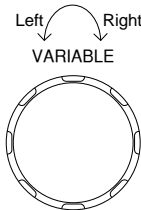

Example

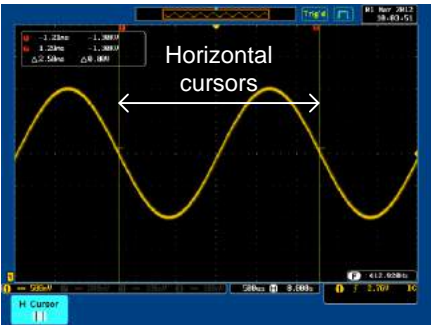


FFT Math

FFT Math has different content.
For FFT math details, see page 84.

①	2.0850MHz	-42.4dB
②	4.0650MHz	-46.4dB
△	1.9800MHz	△4.00dB




- Cursor ① Frequency, dB/V
Cursor ② Frequency, dB/V
△ Delta (difference between cursors)

Example

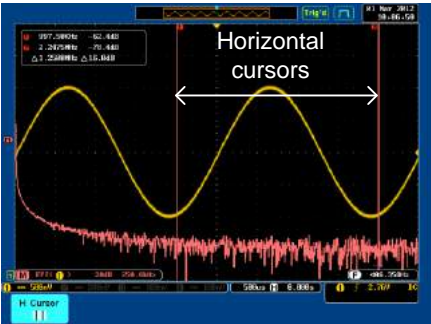

XY Mode

XY mode cursors measure a number of X by Y measurements.

<div><div>1 (X)</div><div>Versus</div><div>2 (Y)</div></div>	<div><div>1</div><div>2</div><div>Δ</div></div>			
	t:	-312us	250us	562us
<div>Rectangular</div> <div></div>	x:	-9.68V	480nV	18.8V
	y:	-9.68V	480nV	18.8V
<div>Polar</div> <div></div>	r:	13.5V	565nV	14.1V
	θ:	-135°	45.8°	45.8°
<div>Product</div> <div></div>	x×y:	92.10V	160nV	1800V
<div>Ratio</div>	y÷x:	1.00V/V	1.00V/V	1.00V/V


Cursor **1** Time, rectangular, polar co-ordinates, product, ratio.

Cursor **2** Time, rectangular, polar co-ordinates, product, ratio.

Δ Delta (difference between cursors)

Example

Horizontal cursors

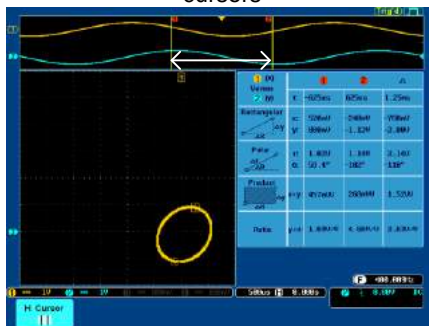


Use Vertical Cursors


Panel Operation/ Range 1. Press the *Cursor* key twice.



2. Press *V Cursor* from the bottom menu.



3. Press *V Cursor* repeatedly to toggle the cursor type.



Range

	Upper cursor movable, lower cursor position fixed
	Lower cursor movable, upper cursor position fixed
	Upper and lower cursor movable together

4. The cursor position information appears on the top left hand side of the screen.

	-416us		9.41V
	376us		-11.5V
	792us		20.9V



Time: cursor 1, cursor 2




Voltage/Current: cursor1, cursor2




Delta (difference between cursors)

5. Use the *Variable knob* to move the cursor(s) up or down.

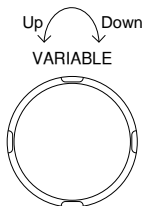

Example

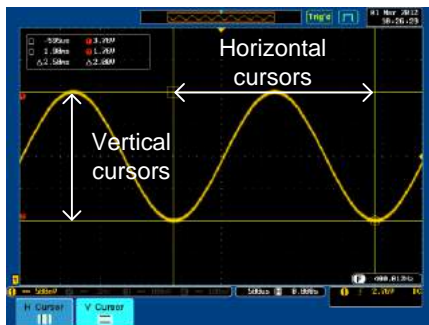


FFT Math

The FFT Math has different content. For FFT math details, see page 84.

□	2.0050MHz	48.0dB
○	4.0650MHz	6.00dB
△	1.9800MHz	42.0dB

- , ○ Frequency/Time: cursor1, cursor2
- ①, ② dB/V: cursor1, cursor2
- △ Delta (difference between cursors)

Example

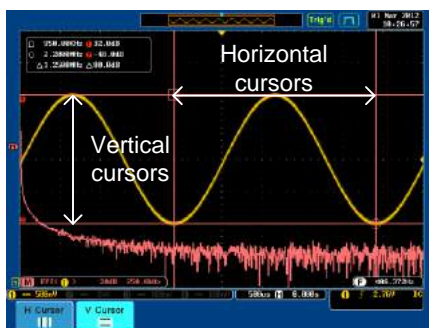


XY Mode

XY mode cursors measure a number of X by Y measurements.

<div> <div>1 (X)</div> <div>Versus</div> <div>2 (Y)</div> </div>	<div> <div>1</div> <div>2</div> <div>Δ</div> </div>		
	t:		
Rectangular 	x: -1.88V y: 2.00V	120mV 0.00V	2.00V -2.00V
Polar 	r: 2.74V θ: 133°	120mV 0.00°	2.82V -45.0°
Product 	x×y: -3.76V	0.00V	-4.00V
Ratio	y÷x: -1.06V/V	0.00V/V	-1.00V/V

- Cursor **1** Rectangular, polar co-ordinates, product, ratio.
- Cursor **2** Rectangular, polar co-ordinates, product, ratio.
- Δ Delta (difference between cursors)

Example

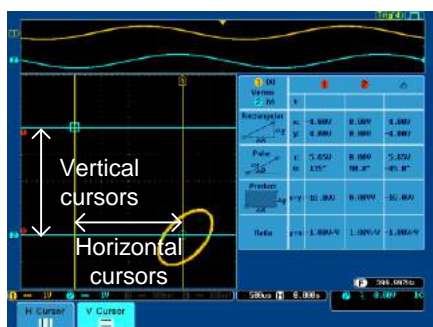

Math Operation

Overview

Background	Math operation runs addition, subtraction, multiplication, division or FFT using the input signals or reference waveforms (Ref1~4) and shows the result on the display. The resulted waveform characteristics can be measured using the cursors.	
Addition (+)	Adds the amplitude of two signals.	
	Source	CH1~4, Ref1~4
Subtraction (-)	Extracts the amplitude difference between two signals.	
	Source	CH1~4, Ref1~4
Multiplication (×)	Multiplies the amplitude of two signals.	
	Source	CH1~4, Ref1~4
Division (÷)	Divides the amplitude of two signals.	
	Source	CH1~4, Ref1~4
FFT	Runs FFT calculations on a signal. Four types of FFT windows are available: Hanning, Hamming, Rectangular, and Blackman.	
	Source	CH1~4, Ref1~4
Hanning FFT Window	Frequency resolution	Good
	Amplitude resolution	Not good
	Suitable for....	Frequency measurement on periodic waveforms


Hamming FFT Window	Frequency resolution	Good
	Amplitude resolution	Not good
	Suitable for...	Frequency measurement on periodic waveforms
Rectangular FFT Window	Frequency resolution	Very good
	Amplitude resolution	Bad
	Suitable for...	Single-shot phenomenon (this mode is the same as having no window at all)
Blackman FFT Window	Frequency resolution	Bad
	Amplitude resolution	Very good
	Suitable for...	Amplitude measurement on periodic waveforms

Addition/Subtraction/Multiplication/Division


Panel Operation 1. Press the *Math* key.



2. Press the *Math* key on the lower bezel.




3. Select *Source 1* from the side menu



Range CH1~4, Ref~4

4. Press *Operator* to choose the math operation.



Range +, -, x, ÷

5. Select *Source 2* from the side menu.

Source2
CH1


Range CH1~4, Ref~4

6. The math measurement result appears on the display. The vertical scale of the math waveform appears at the bottom of the screen.

M 1 + 3 5V

From left: Math function, source1, operator, source2, Unit/div

Example

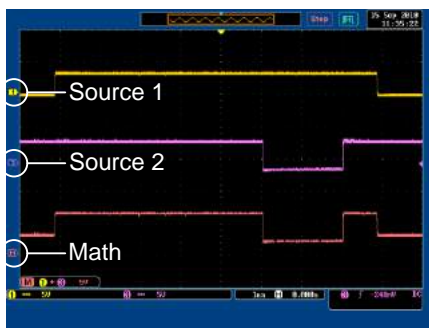

Position and Unit To move the math waveform vertically, press the *Position* key from the side menu and use the variable knob to set the position.

Position
0.00Div

To change the unit/div settings, press *Unit/div*, then use the variable knob change the unit/div.

Unit/div
100mV

Range 2mV~1kV (1-2-5 steps)

Turn Off Math

To turn off the Math result from the display, press the *Math* key again.

M

FFT

Panel Operation 1. Press the *Math* key.



2. Press *FFT* from the bottom menu.



3. Select the *Source* from the side menu.



Range CH1~4, Ref~4

4. Press the *Vertical Units* key from the side menu to select the vertical units used.




Range Linear RMS, dBV RMS

5. Press the *Window* key from the side menu and select the window type.




Range Hanning, Hamming, Rectangular, and Blackman.

6. The FFT result appears. For FFT, the horizontal scale changes from time to frequency, and the vertical scale from voltage/current to dB/RMS.

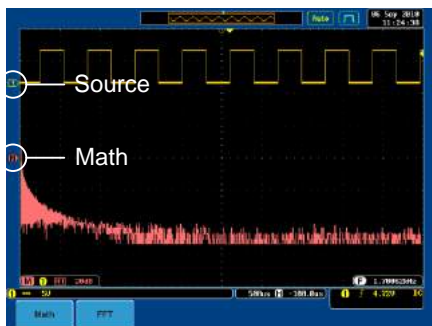


Position and Unit To move the FFT waveform vertically, press *Position* and use the variable knob.



Range -12.00 Div ~ +12.00 Div

To select the vertical scale of FFT waveform, press *Unit/div* and use the variable knob.



Range 2mV~1kV RMS, 1~20 dB

Clear FFT

To clear the FFT result from the display, press the *Math* key again.



Applications

Overview

Background	The APP. function allows different applications to be run. Applications can be downloaded from the GW Instek website.	
Included Applications	GO-NOGO	The GO_NOGO application can be used to set threshold boundaries for input signals. GO-NOGO checks if a waveform fits inside a user-specified maximum and minimum amplitude boundary (template).

Running Applications

Background	The APP. function can host a number of different applications that can be downloaded from the GW Instek website.	
Panel Operation	<div><div>1. Press the <i>Test</i> key.</div><div>2. Press <i>APP.</i> from the bottom menu.</div></div>	



3. Scroll through each Application using the Variable knob.



4. Select an application by pressing the *Select* key *twice*.




x2

Uninstalling Applications

Background	Any APP. function can be easily uninstalled using the <i>Uninstall</i> function.
------------	--

- | | |
|-----------------|-------------------------------|
| Panel Operation | 1. Press the <i>Test</i> key. |
|-----------------|-------------------------------|



- | | |
|--|--|
| | 2. Press <i>APP.</i> from the bottom menu. |
|--|--|



3. Scroll through each Application using the Variable knob.



4. When the desired application is highlighted, press *Uninstall* to begin the uninstallation. Press again to confirm.




×2


Using Go_NoGo

Background

The Go-NoGo test checks if a waveform fits inside a user-specified maximum and minimum boundary (boundary template). Boundary templates are automatically created from a source channel. Boundary tolerance and violation conditions can be set.

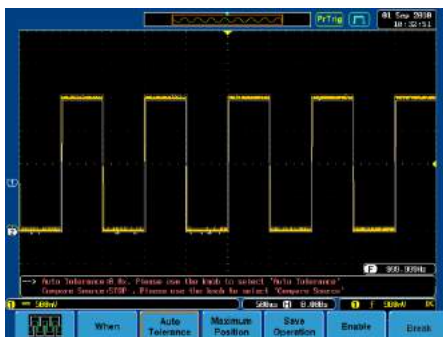

Choose the Go_NoGo application from the APP. menu. See page 86.

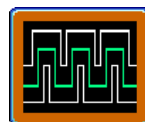

Go-NoGo Conditions

Select the Go-NoGo conditions (When) and actions when a Go-NoGo condition has been met (Violating).


1. Press *When* from the bottom menu and use the Variable knob to select the When condition.



When Exits: Sets the NoGo condition to when the input signal exceeds the limit boundary.

Enters: Sets the NoGo condition to when the input signal stays within the limit boundary.

2. Press *When* again to change the menu to *Violating*. Use the Variable knob to choose the action for when a violation occurs.

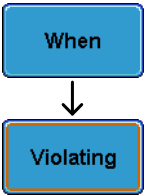

Violating Stop: The waveform will be frozen.
Stop_Beep: The waveform will be frozen and a beep will be output.
Continue: Ignore the violation.
Continue_Beep: Output a beep, but continue to monitor the signal.

Source


1. Press *Compare Source* from the bottom menu and use the Variable knob to select the source.



Source CH1, CH2, CH3, CH4

Tolerance Boundary

1. To set a tolerance, press *Compare Source* again to toggle the menu to *Auto Tolerance*. Use the Variable knob to choose the tolerance as a percentage.

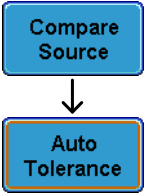

Violating 0.4% ~ 40% (.4% steps)

Note If a tolerance is set, the maximum and minimum boundary is reset as the tolerance boundary.


Maximum and Minimum

1. To set a maximum and minimum boundary, press *Minimum Position* from the bottom menu and use the Variable knob to select the absolute minimum position.



Position Voltage division range

2. Press *Minimum Position* again to toggle the menu to Maximum Position. Choose the maximum position.

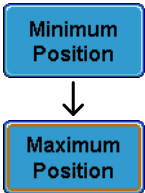

Position Voltage division range

Note If a maximum and minimum boundary is set, the tolerance will be disabled.


Save Boundary Limits

1. Select a *Maximum Position* or a *Tolerance* from the lower menu.
2. To save the Go-NoGo test parameters, press *Save Operation*. The Maximum position will be saved to R1. The tolerance waveforms will be saved to R1 and R2.
3. If a *Maximum Position* was saved, repeat the save procedure for *Minimum Position*. The Minimum position waveform will be saved to R2.



Start Go-NoGo

Press *Enable* to start the Go-NoGo test. The Enable button will change to Disable. Pressing *Disable* will stop the Go-NoGo test and toggle the button back to Enable.

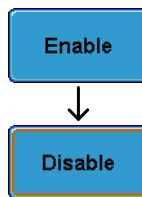

Exit the Application

To exit the application, press *Break*.



Using the Go-NoGo Output

To output the Go-NoGo results to an external device, the Go-NoGo rear panel terminal (open collector) can be used. The Go-NoGo terminal will output a positive pulse each time a NoGo violation has occurred for a minimum of 10us. The voltage of the pulse depends on the external pull-up voltage.




The line out socket can also be used to connect directly to a buzzer.

Line Out




Timing Diagram

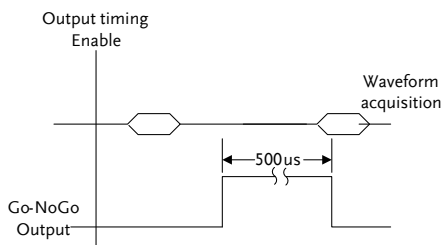

When a No-Go violation occurs the Go-NoGo output will go from a low level to a high level for a minimum of 500us.

Circuit Diagram

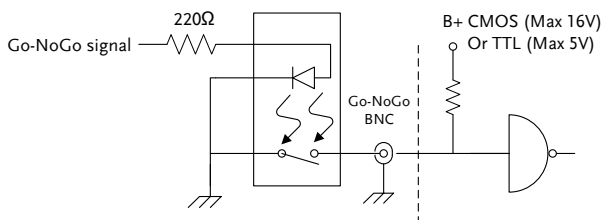

Power Analysis

Power analysis provides automatic measurement for a number of advanced measurement types such as power quality, harmonics, ripple and inrush current. The Power analysis software is an optional software module, for details please see page 191. Please see the Power Analysis manual for more details on using the power analysis software.

Power Analysis Overview

Power Quality	Power quality measures the power of a signal using the measured voltage and current of a signal.
Harmonics	The harmonics function shows signal harmonics up to the 400th harmonic. Harmonic tests can be user defined and common harmonic standards such as IEC 61000-3-2 can also be tested for.
Ripple	The ripple function calculates the ripple and noise of the waveform.
Inrush Current	The inrush function automatically calculates the first peak and second peak inrush current.

Serial Bus

The serial bus trigger and decode software includes support for 3 common serial interfaces, SPI (4 channel models only), UART and I²C. Each interface is fully configurable to accommodate a wide range of protocol variation.

Each input can be displayed as binary or hexadecimal. An event table can also be created to aid in debugging.

Note that the Serial bus trigger and decode software is an optional extra. An activation key is required to activate the software, for details please see page 191. Please see the Serial Bus Decode manual for more details on using the serial bus software.

Serial Bus Overview

UART	<p>Universal Asynchronous Receiver Transmitter. The UART bus is able to accommodate a wide range of various common UART serial communications.</p> <p>The UART serial bus software is suitable for a number of RS-232 protocol variants.</p> <table><tr><td>Inputs</td><td>Tx, Rx</td></tr><tr><td>Threshold</td><td>Tx, Rx</td></tr><tr><td>Configuration</td><td>Baud rate, Parity, Packets, End of packets, Input polarity</td></tr><tr><td>Trigger On</td><td>Tx Start Bit, Rx Start Bit, Tx End of Packet, Rx End of Packet, Tx Data, Rx Data, Tx Parity Error, Rx Parity Error</td></tr></table>	Inputs	Tx, Rx	Threshold	Tx, Rx	Configuration	Baud rate, Parity, Packets, End of packets, Input polarity	Trigger On	Tx Start Bit, Rx Start Bit, Tx End of Packet, Rx End of Packet, Tx Data, Rx Data, Tx Parity Error, Rx Parity Error
Inputs	Tx, Rx								
Threshold	Tx, Rx								
Configuration	Baud rate, Parity, Packets, End of packets, Input polarity								
Trigger On	Tx Start Bit, Rx Start Bit, Tx End of Packet, Rx End of Packet, Tx Data, Rx Data, Tx Parity Error, Rx Parity Error								
I ² C	<p>Inter Integrated Circuit is a two line serial data interface with a serial data line (SDA) and serial clock line (SCLK). The R/W bit can be configured.</p> <table><tr><td>Inputs</td><td>SCLK, SDA</td></tr></table>	Inputs	SCLK, SDA						
Inputs	SCLK, SDA								

Threshold	SCLK, SDA
Configuration	Addressing mode, Read/Write in address
Trigger On	Start, Repeat Start, Stop, Missing Ack, Address, Data, Address/Data

SPI

The SPI (Serial Interface Peripheral) bus is fully configurable to accommodate the wide variety of SPI interfaces. This bus is only available on 4 channel models.

Inputs	SCLK, SS, MOSI, MISO
Threshold	SCLK, SS, MOSI, MISO
Configuration	SCLK edge, SS logic level, Word size, Bit order
Trigger On	SS Active, MOSI, MISO, MOSI&MISO

C ONFIGURATION

Acquisition	99
Select Acquisition Mode	99
Show Waveform in XY Mode	101
Set the Sampling Mode	103
Real Time vs Equivalent Time Sampling Mode	104
Display	105
Display Waveform as Dots or Vectors	105
Set the Level of Persistence	106
Set the Intensity Level	106
Set the Waveform Intensity Type	108
Select Display Graticule	109
Freeze the Waveform (Run/Stop)	110
Turn Off Menu	110
Horizontal View	111
Move Waveform Position Horizontally	111
Select Horizontal Scale	112
Select Waveform Update Mode	113
Zoom Waveform Horizontally	114
Vertical View (Channel)	116
Move Waveform Position Vertically	116
Select Vertical Scale	116
Select Coupling Mode	117
Set the Impedance	118
Invert Waveform Vertically	118
Limit Bandwidth	119
Expand by Ground/Center	120
Select Probe Type	121
Select Probe Attenuation Level	122
Set the Deskew	123
Trigger	124
Trigger Type Overview	124
Trigger Parameter Overview	126
Setup Holdoff Level	130
Setup Trigger Mode	131

Using the Edge Trigger.....	131
Using Advanced Delay Trigger.....	133
Using Pulse Width Trigger	134
Using Video Trigger	136
Pulse Runt trigger.....	137
Using Rise and Fall Trigger	139
System Info / Language / Clock	141
Select Menu Language.....	141
View System Information.....	141
Erase Memory.....	142
Set the Buzzer Volume	143
Set Date and Time	143


Acquisition

The Acquisition process samples the analog input signals and converts them into digital format for internal processing.

Select Acquisition Mode

Background	The acquisition mode determines how the samples are used to reconstruct a waveform.
Sample	This is the default acquisition mode. Every sample from each acquisition is used.
Peak detect	Only the minimum and maximum value pairs for each acquisition interval (bucket) are used. This mode is useful for catching abnormal glitches in the signal.
Hi Resolution	Performs boxcar averaging on the samples. This reduces white noise and increases the vertical resolution of the waveform.
Average	Multiple acquired data is averaged. This mode is useful for drawing a noise-free waveform. To select the average number, use the Variable knob. Average number: 2, 4, 8, 16, 32, 64, 128, 256

Panel Operation 1. Press the *Acquire* key.



2. To set the Acquisition mode, press *Mode* on the bottom menu.



3. Select an acquisition mode from the side menu.

Mode	Sample, Peak Detect, Hi Resolution, Average
Average sample	2, 4, 8, 16, 32, 64, 128, 256



Example


Sample

Peak Detect



High Resolution



Average (256 times)

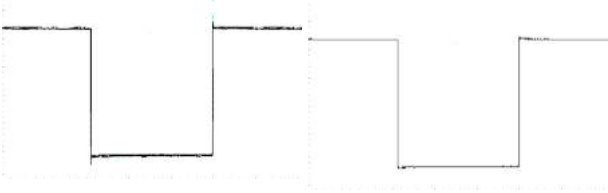




Show Waveform in XY Mode


Background The XY mode maps the voltage of channel 1 to the voltage of channel 2. In 4 channel models, the voltage of channel 3 is mapped to the voltage of channel 4. This mode is useful for observing the phase relationship between waveforms.

Reference waveforms can also be used in XY mode. Ref1 is mapped to Ref2 and Ref3 is mapped to Ref4. Using the reference waveforms is the same as using the channel input waveforms.

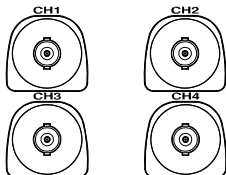
- Connection**
1. Connect the signals to Channel 1 (X-axis) and Channel 2 (Y-axis) or Channel 3 (X2-axis) and Channel 4 (Y2-axis).
 
 2. Make sure a channel pair is active (CH1&CH2 or CH3&CH4). Press the Channel key if necessary. A channel is active if the channel key is lit.
 

- Panel Operation**
1. Press the *Acquire* menu key.
 
 2. Press *XY* from the bottom menu.
 
 3. Choose *Triggered XY* from the side menu.
 

X-Y mode is split into two windows. The top window shows the signals over the full time range. The bottom window shows XY mode.

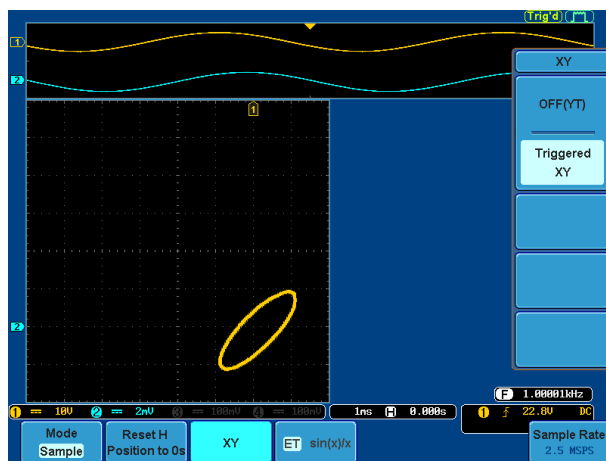


To move the X Y waveform position, use the vertical position knob: Channel 1 knob moves the X Y waveform horizontally, Channel 2 knob moves the X Y waveform vertically. Similarly, the X2 and Y2 axis can be positioned using the channel 3 and channel 4 vertical position knobs.



The horizontal position knob and Time/Div knob can still be used under the XY mode.

Turn Off XY Mode To turn off XY mode, choose *OFF (YT)* mode.



XY Mode

Cursors can be used with XY mode. See the Cursor chapter for details.

Page 75

Set the Sampling Mode

Background The GDS-3000 has two types of sampling modes: ET (Equivalent Time) and $\sin(x)/x$ interpolation. Equivalent time sampling is able to achieve a sample rate of 100GSa/s when sampling periodic waveforms. $\sin(x)/x$ interpolation uses a sinc interpolation formula to reconstruct a continuous signal between sampled points.


Panel Operation 1. Press the *Acquire* key.

A grey, rounded rectangular button with the word "Acquire" in white text.

2. Press the *ET/sin(x)/x* key on the bottom menu to toggle between equivalent time sampling (ET) and $\sin(x)/x$ interpolation.

A blue rectangular button with a white border. It contains the text "ET" in white and " $\sin(x)/x$ " in black.

The sampling rate will be shown on the bottom right-hand corner

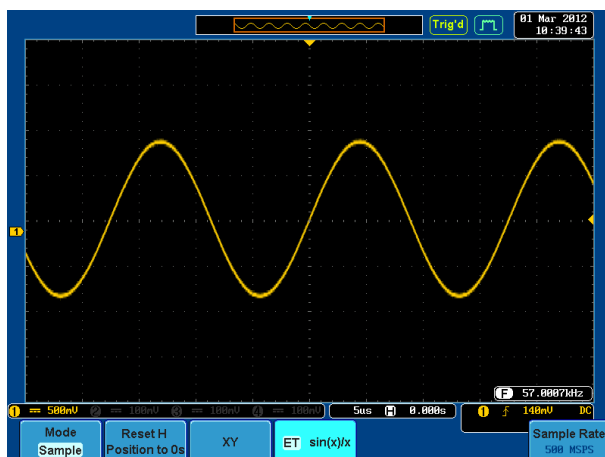

Real Time vs Equivalent Time Sampling Mode

Background The sampling mode on the GDS-3000 can be switched between two sampling modes: Real-time and Equivalent-time. The number of active channels in operation will determine the sampling rate of the DSO. The sampling rate and mode depends on the number of active channels and whether the oscilloscope model has 2 or 4 channels.

Parameter	Real-time sampling	One sample of data is used to reconstruct a single waveform. Real-time sampling is used when the time base is relatively slow or if single shot events need to be captured.
	Equivalent-time sampling	Sampled data is accumulated a number of times to reconstruct a single waveform. This increases the sampling rate, but can only be used for repetitive signals. This mode is usually used when the time base is too fast for real-time sampling.


Display

The Display menu defines how the waveforms and parameters appear on the main LCD display.

Display Waveform as Dots or Vectors

Background When the waveform is displayed on screen, it can be displayed as dots or vectors.

Panel Operation 1. Press the *Display* menu key.



2. Press *Dot Vector* to toggle between Dot and Vector mode.





Range	Dots	Only the sampled dots are displayed.
	Vectors	Both the sampled dots and the connecting line are displayed.

Example:

Vectors (square wave)

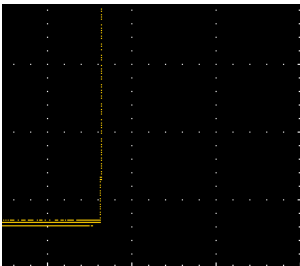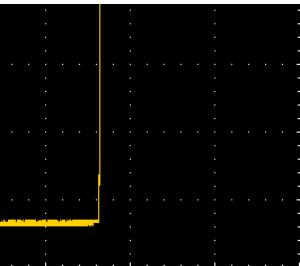


Dots (square wave)



Set the Level of Persistence

Background The persistence function allows the GDS-3000 to mimic the trace of a traditional analog oscilloscope. A waveform trace can be configured to “persist” for designated amount of time.

Panel Operation

1. Press the *Display* menu key. 
2. To set the persistence time, press the *Persistence* menu button on the bottom bezel. 
3. Use the variable knob to select a persistence time. 



Time Auto, 100ms~10s, Infinite, VPO Off

Clear To clear persistence, press *Clear Persistence*. 

Set the Intensity Level

Background The intensity level of a signal can also be set to mimic the intensity of an analog oscilloscope by setting the digital intensity level.

Panel Operation

1. Press the *Display* menu key. 
2. Press *Intensity* from the bottom menu. 

Waveform
Intensity

3. To set the waveform intensity, press *Waveform Intensity* and edit the intensity.

Range 0~100%


Graticule
Intensity

4. To set the graticule intensity, press *Graticule Intensity* from the side menu and edit the intensity value.


Range 10~100%

Example


Waveform Intensity 0%

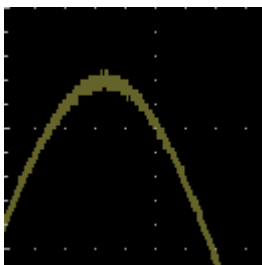

Waveform Intensity 100%

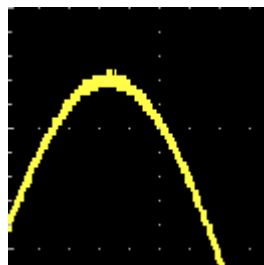

Graticule Intensity 10%

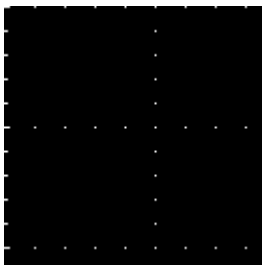


Graticule Intensity 100%



Set the Waveform Intensity Type


Background The intensity gradient of a signal can be set to grayscale or color. If intensity is set to color, the intensity gradient is analogous to a thermal color gradient where high intensity areas are colored red and low intensity areas are colored blue.

- Panel Operation** 1. Press the *Display* menu key.
2. Press *Waveform* from the bottom menu to toggle the intensity type.



Range Gray, Color

Example

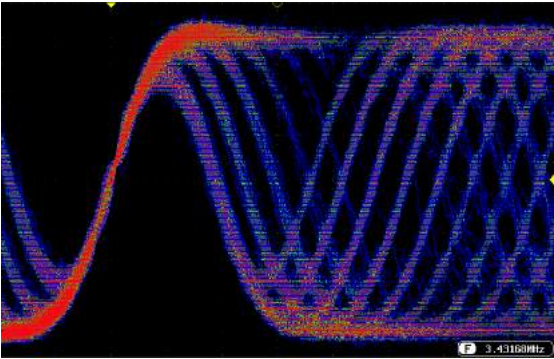

Select Display Graticule

Panel Operation 1. Press the *Display* menu key.

Display

2. Press *Graticule* from the bottom menu.

Graticule

3. From the side menu choose the graticule display type.



Full: Shows the full grid; X and Y axis for each division.



Grid: Show the full grid without the X and Y axis.



Cross Hair: Shows only the center X and Y frame.



Frame: Shows only the outer frame.

Freeze the Waveform (Run/Stop)

For more details about Run/Stop mode, see page 58.

- Panel Operation
1. Press the *Run/Stop* key. To unfreeze the waveform, press the *Run/Stop* key again.




2. The waveform and the trigger freezes. The trigger indicator on the top right of the display shows Stop.



Turn Off Menu

- Panel Operation
1. Press the *Menu Off* key below the side menu keys to reduce a menu. The menu key needs to be pressed each time to reduce one menu.

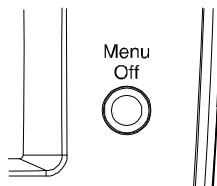

See page 32 for more information.

Horizontal View


This section describes how to set the horizontal scale, position, and waveform display mode.

Move Waveform Position Horizontally


Panel Operation The horizontal position knob moves the waveform left/right.



As the waveform moves, a position indicator on the top of the display indicates the horizontal position of the waveform in memory.




Reset Horizontal Position 1. To reset the horizontal position, press the Acquire key and then press *Reset H Position to 0s* from the bottom menu.

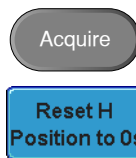

Run Mode In Run mode, the memory bar keeps its relative position in the memory since the entire memory is continuously captured and updated.


Select Horizontal Scale

Select Horizontal Scale To select the timebase (scale), turn the TIME/DIV knob; left (slow) or right (fast).

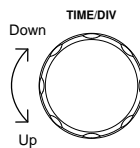


Range 1ns/div ~ 100s/div, 1-2-5 increment
(1-2.5-5 for GDS-350X)

The timebase indicator updates as the TIME/DIV is adjusted.

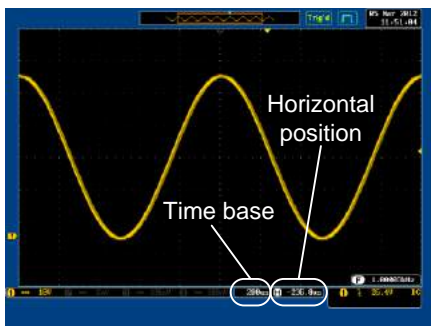


Run Mode In Run mode, the memory bar and waveform size keep their proportion. When the time base becomes slower, roll mode is activated (if trigger is set to Auto).

Stop Mode In Stop mode, the waveform size changes according to the scale.



Select Waveform Update Mode

Background	The display update mode is switched automatically or manually according to the timebase and trigger.	
Normal	Updates the whole displayed waveform at once. Automatically selected when the timebase (sampling rate) is fast. Timebase $\leq 50\text{ms/div}$ ($\geq 50\text{kSa/s}$) Trigger all modes	
Roll Mode	<div>Roll</div>	Updates and moves the waveform gradually from the right side of the display to the left. Automatically selected when the timebase (sampling rate) is slow. Timebase $\geq 100\text{ms/div}$ ($\leq 25\text{kSa/S}$) 350MHz models ($\leq 20\text{kSa/S}$) 500MHz models Trigger all modes

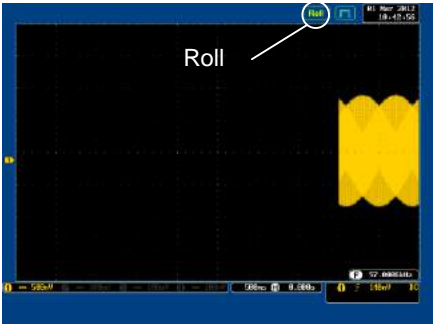

Select Roll Mode Manually 1. Press the Trigger Menu key.



2. Press Mode from the bottom menu and select Auto (Untriggered Roll) from the side menu.




Zoom Waveform Horizontally

Background When in Zoom mode the screen is split into 2 sections. The top of the display shows the full record length, with the bottom of the screen showing the normal view.


Panel Operation 1. Press the *Zoom* key.



2. The Zoom mode screen appears.

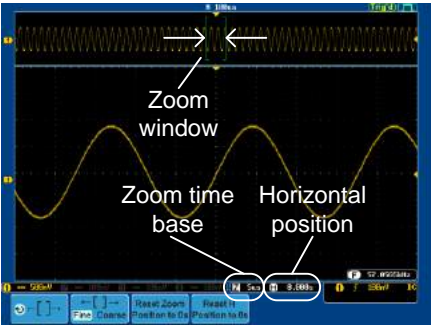


Horizontal Navigation To scroll the waveform left or right, use the *Horizontal Position* knob.



To reset the horizontal position, press *Reset H Position to 0s*.



Zoom To increase the zoom range, use the *TIME/DIV* knob.

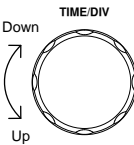


The zoom time base (Z) at the bottom of the screen will change accordingly.



Move the Zoom Window

Use the *Variable* knob to pan the zoom window horizontally.

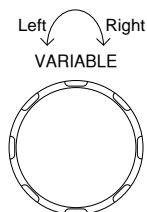


To reset the Zoom position, press
Reset Zoom Position to 0s.



Scroll Sensitivity


To alter the scrolling sensitivity of the Zoom Window, press the $\leftarrow[\]\rightarrow$ key to toggle the scrolling sensitivity.



Sensitivity Fine, Coarse

Exit

To go back to the original view, press the *Zoom* key again.




Vertical View (Channel)

This section describes how to set the vertical scale, position, and coupling mode.

Move Waveform Position Vertically

Panel Operation 1. To move the waveform up or down, turn the *vertical position* knob for each channel.



2. As the waveform moves, the vertical position of the cursor appears at the bottom half of the display.

Position = 0.00V

View or Reset Vertical Position 1. Press a channel key. The vertical position is shown in the \updownarrow Position / \downarrow Set to 0 soft key.




2. To change the position, press \updownarrow Position / \downarrow Set to 0 to reset the vertical position or turn the *vertical position* knob to the desired level.


Run/Stop Mode The waveform can be moved vertically in both Run and Stop mode.

Select Vertical Scale

Panel Operation To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up).

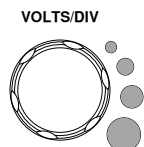

The vertical scale indicator on the bottom left of the display changes accordingly for the specific channel.

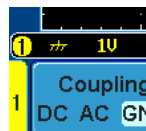

Range 2mV/div ~ 1V/div (50Ω/75Ω),
2mV/div ~ 5V/div (1MΩ). 1-2-5 increments


Stop Mode In Stop mode, the vertical scale setting can be changed.

Select Coupling Mode


Panel Operation 1. Press a *channel* key.




2. Press *Coupling* repeatedly to toggle the coupling mode for the chosen channel.




Range



DC coupling mode. The whole portion (AC and DC) of the signal appears on the display.




AC coupling mode. Only the AC portion of the signal appears on the display. This mode is useful for observing AC waveforms mixed with DC signals. AC coupling is not available with input impedances of 75Ω or 50Ω.




Ground coupling mode. The display shows only the zero voltage level as a horizontal line.

Example Observing the AC portion of the waveform using AC coupling

DC coupling

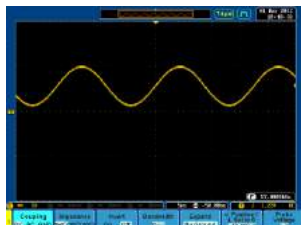

AC coupling

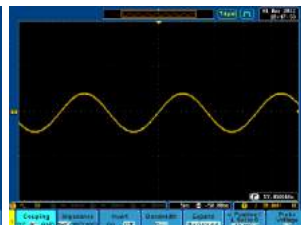

Set the Impedance

Panel Operation 1. Press the *Channel* key.



2. Press *Impedance* repeatedly to toggle between the impedance settings.




Impedance 1M Ω , 75 Ω , 50 Ω

Invert Waveform Vertically

Panel Operation 1. Press the *Channel* key.



2. Repeatedly press *Invert* to toggle Invert On or Off.



Limit Bandwidth

Background Bandwidth limitation puts the input signal into a selected bandwidth filter.

This function is useful for cutting out high frequency noise to see a clear waveform shape.

The bandwidth filters available are dependent on the bandwidth of the oscilloscope model.

Panel Operation 1. Press the *Channel* key.



2. Press *Bandwidth* from the bottom menu.



3. Choose a bandwidth* from the side menu (depending on the bandwidth of the oscilloscope).


Range	150MHz models: Full, 20MHz
	250MHz models: Full, 20MHz, 100MHz
	350MHz models: Full, 20MHz, 100MHz, 200MHz
	500MHz models: Full, 20MHz, 100MHz, 200MHz, 350MHz

Note When the input impedance is set to 75Ω , the bandwidth is limited to a maximum of 150MHz.

Example

BW Full

BW Limit 20MHz

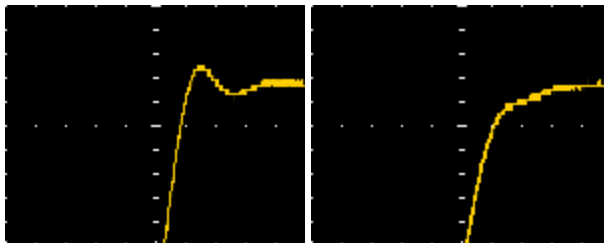

Expand by Ground/Center

Background

When the voltage scale is changed, the Expand function designates whether the signal expands from the center of the signal or from the signal ground level. Expand by center can be used to easily see if a signal has a voltage bias. Expand by ground is the default setting.

Panel Operation

1. Press a *channel* key.



2. Press *Expand* repeatedly to toggle between expand *By Ground* and *Center*.



Range

By Ground, By Center

Example

If the vertical scale is changed when the Expand function is set to ground, the signal will expand from the ground level*. The ground level does not change when the vertical scale is changed.


If the vertical scale is changed when the Expand function is set to center, the signal will expand from the center of the signal. The ground level will suit to match the signal position.

*Or from the upper or lower edge of the screen if the ground level is off screen.

Expand by Ground



Expand by Center

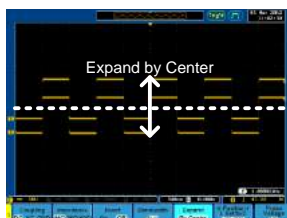

Select Probe Type

Background


A signal probe can be set to voltage or current.

Panel Operation


1. Press the *Channel* key.



2. Press *Probe* from the bottom menu.



3. Press the *Voltage/Current* softkey to toggle between voltage and current.



Select Probe Attenuation Level

Background A signal probe has an attenuation switch to lower the original DUT signal level to the oscilloscope input range, if necessary. The probe attenuation selection adjusts the vertical scale so that the voltage level on the display reflects the real value on a DUT.


Panel Operation 1. Press the *Channel* key.



2. Press *Probe* from the bottom menu.



3. Press *Attenuation* on the side menu and use the variable knob to set the attenuation.

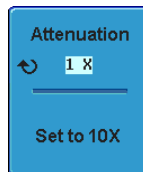

Alternatively, press *Set to 10X*.

Range 1mX ~1kX (1-2-5 step)

Note The attenuation factor adds no influence on the real signal. It just changes the voltage/current scale on the display.


Set the Deskew

Background	The deskew function is used to compensate for the propagation delay between the oscilloscope and the probe.
------------	---


- Panel Operation
1. Press one of the *Channel* keys.



2. Press *Probe* from the bottom menu.



3. Press *Deskew* on the side menu and use the variable knob to set the deskew time.

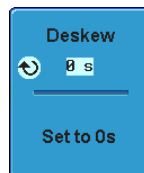

Alternatively, press *Set to 0s* to reset the deskew time.

Range -50ns~50ns, 10ps increments

4. Repeat the procedure for another channel if necessary.


Trigger

The trigger configures the conditions for when the GDS-3000 captures a waveform.

Trigger Type Overview

Edge

The edge trigger is the simplest trigger type. An edge trigger triggers when the signal crosses an amplitude threshold with either a positive or negative slope.

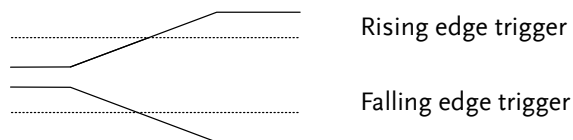


Delay


The Delay trigger works in tandem with the edge trigger, by waiting for a specified time or number of events before the edge trigger starts. This method allows pinpointing a location in a long series of trigger events.

Note: when using the delay trigger, the edge trigger source can be any one of the channel inputs, the EXT input or the AC line.

Delay trigger example (by event)

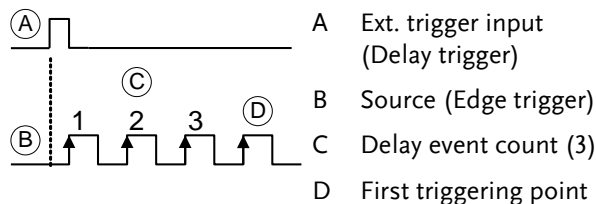

Delay trigger example (by time)

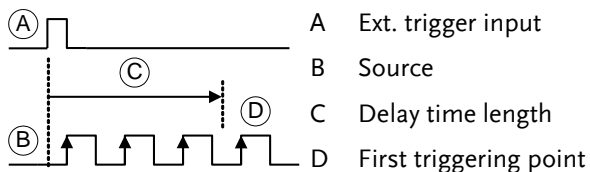

Pulse Width

Triggers when the pulse width of the signal is less than, equal, not equal or greater than a specified pulse width.




Video

Extracts a sync pulse from a video format signal, and triggers on a specific line or field.


Pulse and Runt

Triggers on a "runt". A runt is a pulse that passes a specified threshold but fails to pass a second threshold. Both positive and negative runts can be detected.

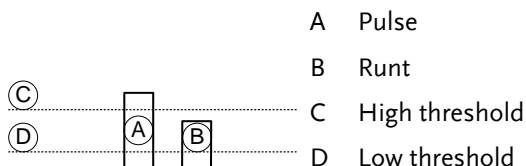



Rise and Fall






Trigger on rising and or falling edges, below or over a specified rate. The threshold can also be specified.



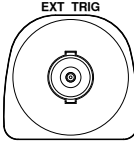

Trigger Parameter Overview



All the following parameters are common for all the trigger types unless stated otherwise.



Trigger Source	CH1 ~ 4	Channel 1 ~ 4 input signals	
	EXT	External trigger input signal	
	AC Line	AC mains signal	
	Alternate	Alternate between channel sources for the trigger source.	
	EXT Probe	Probe trigger source. Set the probe as either current or voltage.	
Trigger Mode	Auto (un-triggered roll)	The GDS-3000 generates an internal trigger if there is no trigger event, to make sure waveforms are constantly updated regardless of trigger events. Select this mode especially when viewing rolling waveforms at slower timebases.	
	Normal	The GDS-3000 acquires a waveform only when a trigger event occurs.	
	Single	The GDS-3000 acquires a waveform once when a trigger event occurs, then stops acquiring. Press the Single key to acquire a waveform again.	

Coupling (Edge, Delay)	DC	DC coupling.	
	AC	AC coupling. Blocks DC components from the trigger circuits.	
	HF reject	High frequency filter above 50kHz	
	LF reject	Low frequency filter below 50kHz	
	Reject noise	DC coupling with low sensitivity to reject noise.	
Slope (Edge, Delay, Rise & Fall)		Trigger on a rising edge.	
		Trigger on a falling edge.	
		Don't care.	
		(Rise & Fall trigger type only)	
Trigger Level (Edge, Delay)	Level	Adjusts the trigger manually using the Trigger LEVEL knob.	
	Set to TTL 1.4V	Sets the trigger level to 1.4V, suitable for triggering on TTL signals.	
	Set to ECL - 1.3V	Sets the trigger to -1.3V. This is suitable for ECL circuits.	
	Set to 50%	Sets the trigger level to 50% of the waveform amplitude.	
Holdoff	Holdoff	Sets the holdoff time.	
	Set to Minimum	Set the holdoff time to the minimum.	

Delay (Delay)	Time	Sets the delay time (10ns ~ 10s) between the trigger event and the real trigger timing.		
	Event	Sets the number of events (1 ~ 65535) passed after the trigger event, until the real trigger timing.		
	Set to Minimum	Sets the source trigger to the minimum time.		
When (Pulse Width)	Sets the pulse width (4ns ~ 10s) and the triggering condition.			
	>	Longer than	=	Equal to
	<	Shorter than	≠	Not equal to
Threshold (Pulse Width)	Sets the amplitude threshold level for the pulse widths.			
	Threshold	-XXV ~ +XXV, user-set level		
	Set to TTL	1.4V		
	Set to ECL	-1.3V		
	Set to 50%	Sets the threshold to 50%		
Standard (Video)	NTSC	National Television System Committee		
	PAL	Phase Alternate by Line		
	SECAM	SEquential Couleur A Memoire		
	EDTV	480P (NTSC) (576p PAL)		
	HDTV	720P, 1080i, 1080P signals		
Polarity (Edge, Video)		Positive polarity (triggered on the high to low transition)		
		Negative polarity (triggered on the low to high transition)		

Trigger On (Video)	Selects the trigger point in the video signal.	
	Field	1 or 2 or all.
	Line	1~263 for NTSC, 1~313 for PAL/SECAM, 1~ 525/625 for EDTV, 1~562/750/1125 for HDTV or all.


Threshold (Pulse Runt)		Sets the upper threshold limit.
		Sets the lower threshold limit.
	Set to TTL	1.4V
	Set to ECL	-1.3V

Threshold (Rise & Fall)		High Sets the High threshold.
		Low Sets the Low threshold.
	Set to TTL	1.4V
	Set to ECL	-1.3V


Setup Holdoff Level

Background

The holdoff function defines the waiting period before the GDS-3000 starts triggering again after a trigger point. The holdoff function ensures a stable display if there are a number of points in a periodic waveform that can be triggered. Holdoff applies to all the triggering types.

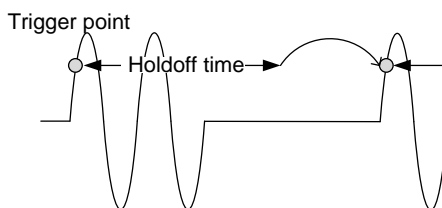


Panel Operation 1. Press the trigger *Menu* key.



2. To set the Holdoff time, press the *Holdoff* (or *Mode/Holdoff*) menu button on the bottom bezel.




3. Use the side menu to set the Holdoff time.



Range 10ns~10s

Pressing *Set to Minimum* sets the Holdoff time to the minimum, 10ns.




Note: The holdoff function is automatically disabled when the waveform update mode is in roll mode (page113).

Setup Trigger Mode

Background The trigger mode can be set to Normal or Auto (untriggered roll). The triggering mode applies to all the trigger types. See page 113.

Panel Operation 1. Press the Trigger menu key.



2. Press *Mode* from the bottom menu to change the triggering mode.



3. Use the side panel to select *Auto* or *Normal* triggering modes.

Range Auto, Normal

Using the Edge Trigger

Panel Operation 1. Press the Trigger menu key.



2. Press *Type* from the lower bezel menu.




3. Select *Edge* from the side menu. The edge trigger indicator appears at the bottom of the display.



From left: trigger source, slope, trigger level, coupling


4. Press *Source* to change the trigger source.



5. Use the side menu to select the trigger source type.

Range Channel 1 ~ 4 (Alternate On/Off),
Line, EXT (Ext Probe: Volt/ Current,
Attenuation: 1mX~1kX), AC Line


6. Press *Coupling* from the bottom bezel menu to select the trigger coupling or frequency filter settings.



7. Choose the coupling from the side menu.


Range DC, AC

8. Press *Reject* to toggle the rejection filter from the side menu.



Range HF Reject, LF Reject, Off

9. Toggle *Noise Rejection* On or Off from the side menu.



Range On, Off

10. From the bottom menu press *Slope* to toggle the slope type.




Range Rising edge, falling edge

11. To set the external trigger level, select *Level* from the bottom bezel menu.



12. Set the external trigger level using the side menu.



Range 00.0V~ 5 screen divisions
 Set to TTL 1.4V
 Set to ECL -1.3V
 Set to 50%

Using Advanced Delay Trigger

Background The EXT trigger source is always used as the delay triggering source.

- Panel Operation** 1. Press the trigger *Menu* key.



2. Press *Type* from the lower bezel menu.



3. Select *Delay* from the side menu.
 The delay + edge trigger indicator appears at the bottom of the display.



From left: external source, slope, trigger level, delay + external source

4. To set the delay press *Delay* from the bottom bezel.




5. To Delay by Time, press *Time* from the side menu and set the delay time.



Range 10ns ~ 10s (by time)
Set to minimum


6. To Delay by Event, press *Event* from the side menu and set the number of events.



Range 1 ~ 65535 events
Set to Minimum

Using Pulse Width Trigger

- Panel Operation 1. Press the trigger *Menu* key.



2. Press the *Type* key from the lower bezel menu.



3. Select *Pulse Width* from the side menu. The pulse width trigger indicator appears at the bottom of the display.



From left: external source, polarity, when

4. Press *Source* from the lower bezel.



5. Use the side menu to select the pulse width trigger source.


Range Channel 1 ~ 4 (Alternate On/Off),
 Line, EXT (Ext Probe: Volt/Current,
 Attenuation: 1mX~1kX), AC Line

6. Press *Polarity* to toggle the polarity type.



Range Positive (high to low transition)
 Negative (low to high transition)

7. Press *When* from the lower bezel.



8. Then use the side menu to select the pulse width condition and width.

Condition > , < , = , ≠

Width 4ns ~ 10s

9. Press *Threshold* from the lower bezel to edit the pulse width threshold.



10. Use the side menu to set the threshold.

Range -XXV~XXV
 Set to TTL 1.4V
 Set to ECL -1.3V
 Set to 50%

Using Video Trigger

Panel Operation 1. Press the trigger *Menu* key.



2. Press the *Type* key from the lower bezel menu.




3. Select *Video* from the side menu.
The video trigger indicator appears at the bottom of the display.



From left: channel, video standard, field, line

4. Press *Source* from the lower bezel.



5. Use the side menu to select the video trigger source.

Range Channel 1 ~ 4

6. Press *Standard* on the bottom bezel.



7. Use the side menu to select the video standard.

Range NTSC, PAL, SECAM, EDTV
(480P/576P), HDTV
(720P/1080i/1080P)

8. Press *Trigger On* to edit the video field and line.



9. Use the side menu to select the field and line.

Field 1, 2, All

Video line NTSC: 1 ~ 262 (Even), 1 ~ 263 (Odd)
PAL/SECAM: 1 ~ 312 (Even),
1 ~ 313 (Odd),

EDTV(480P): 1~ 525, EDTV(576P):
1~ 625

HDTV(720P): 1~ 750, HDTV (1080i):
1 ~ 562 (even), 1~563 (odd), HDTV
(1080P): 1~1125, All

10. Press *Polarity* to toggle the polarity type.



Range positive, negative

Pulse Runt trigger


- Panel Operation 1. Press the trigger *Menu* key.



2. Press the *Type* key from the lower bezel menu.




3. Select *Others* → *Pulse Runt* from the side menu. The Pulse and Runt indicator appears at the bottom of the display.



From left: Polarity, source, high/low threshold, threshold level

4. Press *Source* from the lower menu.



5. Use the side menu to select a source.


Range Channel 1 ~ 4

6. Press *Polarity* to toggle the polarity.



Range Rising edge, falling edge, either.

7. Press *When* from the lower menu.




8. Then use the side menu to select the condition and width.


Condition > , < , = , ≠

Width 4ns ~ 10s

9. Press *Threshold* from the lower bezel to edit the threshold for each input source.



10. Use the side menu to set the upper threshold.




Range -XXV~XXV

Set to TTL 1.4V

Set to ECL -1.3V

11. Use the side menu to set the lower threshold.



Range -XXV~XXV
 Set to TTL 1.4V
 Set to ECL -1.3V

Using Rise and Fall Trigger


- Panel Operation 1. Press the trigger *Menu* key.



2. Press the *Type* key from the lower bezel menu.




3. Select *Others* → *Rise and Fall* from the side menu.
 The Rise and Fall indicator appears at the bottom of the display.



From left: rise and fall, source, high/low threshold, threshold level

4. Press *Source* from the lower menu.



5. Use the side menu to select a source.


Range Channel 1 ~ 4

6. Press *Slope* from the bottom menu to toggle the slope.



Range Rising edge, falling edge, either

7. Press *When* from the lower menu.




8. Then use the side menu to select the logic conditions and true or false status.

Condition > , < , = , ≠

Width 4ns ~ 10s

9. Press *Threshold* from the lower bezel to edit the threshold for each input source.



10. Use the side menu to set the threshold for the current input.

Range High: -XXV~XV

Low: -XXV~XXV

Set to TTL 1.4V

Set to ECT -1.3V

System Info / Language / Clock

This section describes how to set the interface, beeper, language, time/date, and probe compensation signal.

Select Menu Language


Parameter The following is a list of language available by default. Language selection may differ according to the region to which the GDS-3000 is shipped.

- English
- Chinese (simplified)
- Japanese
- French
- German
- Chinese (traditional)
- Korean
- Polish
- Russian

Panel Operation 1. Press the *Utility* key.



2. Select the language from the side menu.



Range* English, Trad. Chinese, Simp. Chinese, Korean, Japanese, Polish, French, Russian, German.

*Language selection may differ based on region.

View System Information

Panel Operation 1. Press the *Utility* key.



2. Press *System* from the lower menu.

System

3. Press *System Info* from the side menu. A display panel will appear showing:

System
Info

- Manufacturer name
- Model name
- Serial number
- Firmware version
- Manufacturer URL
- App download location



Erase Memory

Background

The Erase Memory function will erase all internal waveforms, setup files and labels from internal memory.

Erased Items

Waveform 1~20, Setting memory 1~20, Reference 1~4, Labels

Panel Operation

1. Press the *Utility* key.

Utility

2. Press *System* from the lower menu.

A blue rectangular button with rounded corners and a thin black border, containing the word "System" in black text.

3. Press *Erase Memory* from the side menu.

A blue rectangular button with rounded corners and a thin black border, containing the text "Erase Memory" in black text.

A message will prompt you to press *Erase Memory* again to confirm the process.

4. Press *Erase Memory*.

A blue rectangular button with rounded corners and a thin black border, containing the text "Erase Memory" in black text.

Set the Buzzer Volume

- Panel Operation 1. Press the *Utility* key.

A grey oval button with rounded ends and a thin black border, containing the word "Utility" in black text.

2. Press *System* from the lower menu.

A blue rectangular button with rounded corners and a thin black border, containing the word "System" in black text.

3. Press the buzzer icon on the side panel. Use the variable knob to set the volume.



Set Date and Time

- Panel Operation/ 1. Press the *Utility* key.
Parameter


A grey oval button with rounded ends and a thin black border, containing the word "Utility" in black text.

2. Press *Date & Time* on the lower menu.




3. Set the *Year, Month, Day, Hour* and *Minute* from the side menu.

Year 2000 ~ 2037




Month 1 ~ 12



Day 1 ~ 31

Hour 1~23



Minute 0~59

4. Press *Save Now* from the side menu to save the date and time.



5. Make sure the date/time setting is correctly reflected at the top of the display.



S

AVE/RECALL

File Format/Utility	146
Image File Format	146
Waveform File Format	146
Spreadsheet File Format	147
Setup File Format	148
Create/Edit file labels	150
Save	152
File Type/Source/Destination	152
Save Image	153
Save Image - Print/Save Key	154
Save Waveform	156
Save Setup	157
Recall	159
File Type/Source/Destination	159
Recall Default Panel Settings	159
Recall Waveform	161
Recall Setup	162
Reference Waveforms	164
Recall and Display Reference Waveforms	164

File Format/Utility

Image File Format

Format	DSxxxx.bmp or DSxxxx.png
Contents	The current display image is 800 by 600 pixels. The background color can be inverted (Ink saver function). Each image file is numbered consecutively from DS0001 to DS9999.

Waveform File Format

Format	DSxxx.lsf, CH1~CH4.lsf The LSF file format efficiently stores waveforms. This is the file format that is used for storing and recalling waveforms for measurement with the GDS-3000 series oscilloscopes.	
Waveform Type	CH1 ~ 4	Input channel signal
	Math	Math operation result (page 81)
Storage Location	Wave1 ~ Wave20	Waveform files stored to the internal memory. Stored waveforms can be copied to Ref. 1 ~ 4 to be viewed on the display. (W1 ~ W20 waveforms cannot be directly recalled on the display).

Ref 1~4	Reference waveforms stored in the internal memory, separate from W1 ~ W20. Reference waveforms (Ref 1 ~ 4) can be displayed directly onto the display with amplitude and frequency information. Ref 1~4 are useful for reference purposes. Other waveforms (LSF and W1~20) must be recalled to R1~4 before being displayed.
Contents: Waveform Data	The waveform data can be used for detailed analysis. It consists of the horizontal and vertical data used by the waveform for the entire memory length.

Spreadsheet File Format

Format	DSxxxx.csv (Comma-separated values format, can be opened in spreadsheet applications such as Microsoft Excel). CSV files cannot be recalled onto the GDS-3000 series of oscilloscopes.	
Waveform Type	CH1 ~ 4	Input channel signal
	Math	Math operation result (page81)
Contents: Waveform Data	Digital waveform data containing the channel information such as vertical and horizontal position of a signal for the entire memory length.	
Contents: Other Data	<p>The following information is also included in the waveform file.</p> <ul style="list-style-type: none"> • Firmware version • Horizontal mode • Trigger level • Vertical scale • Vertical position • Time of acquisition • Memory length • Vertical units • Probe level • Horizontal units 	

- Horizontal scale
- Horizontal position
- Time (of points)
- Horizontal scale
- Sampling period
- Channel




Setup File Format


Format	DSxxxx.set (proprietary format) The setup file saves or recalls the following settings.		
Contents	Acquire	<ul style="list-style-type: none">• Mode• Sample rate	<ul style="list-style-type: none">• XY• Sample mode
	Display	<ul style="list-style-type: none">• Mode• Persistence• Waveform intensity	<ul style="list-style-type: none">• Graticule intensity• Waveform visuals• Graticule
	Channel	<ul style="list-style-type: none">• Scale• Channel• Coupling• Impedance• Invert• Bandwidth	<ul style="list-style-type: none">• Expand• Position• Probe• Probe attenuation• Deskew
	Cursor	<ul style="list-style-type: none">• Horizontal cursor	<ul style="list-style-type: none">• Vertical cursor
	Measure	<ul style="list-style-type: none">• Source• Gating	<ul style="list-style-type: none">• Display
	Horizontal	<ul style="list-style-type: none">• Scale	
	Math	<ul style="list-style-type: none">• Source1• Operator• Source2	<ul style="list-style-type: none">• Position• Unit/Div• Math Off

Trigger	• Type	• Noise Rejection
	• Source	• Slope
	• Coupling	• Level
	• Alternate	• Mode
	• Rejection	• Holdoff
Utility	• Language	• Ink Saver
	• Print key	
Save/ recall	• Image file format	• Data file format


Create/Edit file labels

Format Reference files and Setup files stored in internal memory can have individual labels set. The labels are used on the reference waveform and setup file icons.

- Panel Operation**
1. Press the *Save/Recall* key from the front panel. 
 2. Press *Edit File Label* from the bottom menu. 
 3. Press *Label For* to choose a Reference or Setup file. 

Label For Ref1~4, Set1~20
 4. To choose a preset label, Press *User Preset* from the side menu and choose a label. 


Labels ACK, AD0, ANALOG, BIT, CAS, CLK, CLOCK, CLR, COUNT, DATA, DTACK, ENABLE, HALT, INT, IN, IRQ, LATCH, LOAD, NMI

- Edit Label**
1. Press *Edit Character* to edit the current label. 


- The Edit Label window appears.



- Use the Variable knob to highlight a character.

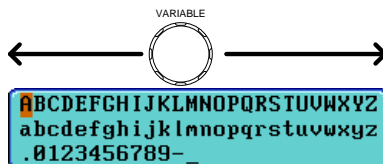


Press *Enter Character* to select a number or letter.



Press *Back Space* to delete a character.



Press *Editing Completed* to create the new label and return to the previous menu.



Cancel

Press *Cancel* to cancel the operation and return to the previous menu.



Save

File Type/Source/Destination

Item	Source	Destination
Panel Setup (DSxxxx.set)	<ul style="list-style-type: none"> Front panel settings 	<ul style="list-style-type: none"> Internal memory: Set1 ~ Set20 File system: Disk, USB
Waveform Data (DSxxxx.csv) (DSxxxx.lsf) (CH1~CH4.lsf, Ref1~Ref4.lsf, Math.lsf)* ALLxxxx.csv	<ul style="list-style-type: none"> Channel 1 ~ 4 Math operation result Reference waveform Ref1~4 All displayed waveforms 	<ul style="list-style-type: none"> Internal memory: Reference waveform Ref1~4, Wave1 ~ Wave20 File system: Disk, USB
Display Image (DSxxxx.bmp) (DSxxxx.png)	<ul style="list-style-type: none"> Display image 	<ul style="list-style-type: none"> File system: Disk, USB


*Stored in ALLXXX directories when All Displayed waveforms are saved

Save Image

Panel Operation

- To save to USB, connect a USB drive to the front or rear panel USB port. If a USB drive is not connected, images will be saved to the internal memory.

Note: Only one host connection, front or rear, is allowed at a time.

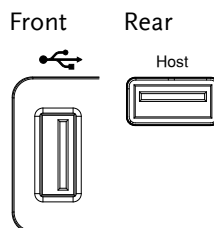

- Press the *Save/Recall* key from the front panel.

Save/Recall

- Press *Save Image* from the bottom menu.

Save
Image

- Press *File Format* to choose PNG or BMP file types.


File Format
Bmp

Range DSxxxx.bmp, DSxxxx.png

- Press *Ink Saver* to toggle Ink Saver On or Off.

Ink Saver
On Off

Ink Saver On

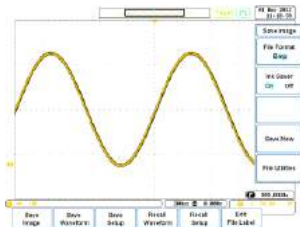


Ink Saver Off



- Press *Save Now* from the side menu to save the display as an image file.

Save Now

Image save to USB :/DS0006.BMP completed!



Note

The file will not be saved if the power is turned Off or the USB drive is taken out before the message ends.

USB File Utility

To edit the USB flash drive contents (create/ delete/ rename files and folders) or to edit the default file path, press *File Utilities* from the side menu. See page 165 for details.

File Utilities


Save Image - Print/Save Key

Background

The Print/Save key can be assigned to Print or to Save. When assigned to Save, pressing the Print/Save key will save a screen image to USB.

Panel Operation

- Connect a USB drive to the front or rear panel USB port.
Note: Only one host connection, front or rear, is allowed at a time.

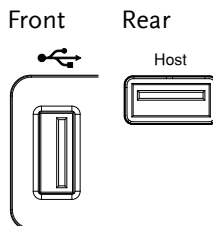

- Press the *Utility* key.

Utility

- Press *Printout* from the bottom menu.

Printout

4. On the side menu, press *Function* repeatedly to select *Save*.



The *Save* led on the screen bezel will be lit when the printout function is set to *Save*.

☐ Print




☒ Save

5. Press the *Print/Save* key to save to USB.

Image save to USB :/DS0006.BMP completed!



Ink Saver

To invert the color for the saved or printed display image, press *Ink Saver* repeatedly to toggle *Ink Saver On* or *Off* from the side menu.



Ink Saver On (Inverted)


Ink Saver Off (Normal)

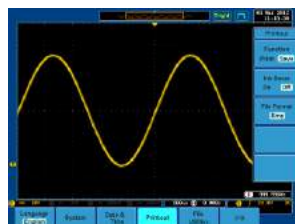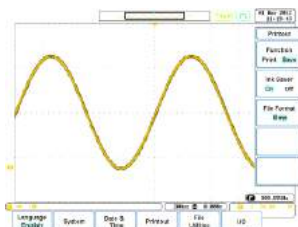

Save Waveform

Panel Operation

- (For saving to an external USB flash drive) Connect the drive to the front or rear panel USB port.
Note: Only one host connection, front or rear, is allowed at a time.

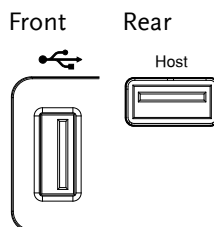

- Press the *Save/Recall* key from the front panel.



- Press *Save Waveform* from the bottom menu.



- Choose the *From* waveform on the side menu.



Source CH1~4, Math, Ref1~4, All
Displayed

- Press *To* (internal memory) or *To File* and choose a destination to save.



To Ref1~4, Wave1~4


To File DSxxxx.csv, DSxxxx.lsf,
CH1~CH4.lsf*

*(saved to an ALLxxx directory)

- Press *Save Now* to confirm saving. When completed, a message appears at the bottom of the display.



Waveform save to Disk: \DS0001.CSV completed!



Note

The file will not be saved if the power is turned Off or the USB drive is taken out before the message ends.

USB File Utility

To edit USB flash drive contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page 165.

File Utilities

PC Software
(FreeWave)


Saving waveforms can also be accomplished using FreeWave, downloadable from GWInstek website.



Save Setup

Panel Operation

1. (For saving to an external USB flash drive) Connect the drive to the front or rear panel USB port.
Note: Only one host connection, front or rear, is allowed at a time.

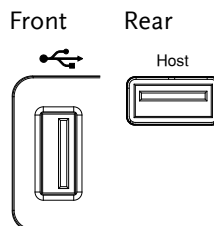

2. Press the *Save/Recall* key from the front panel.
3. Press *Save Setup* from the bottom menu.

Save/Recall

Save
Setup

4. Press *To* (internal memory) or *To File* and choose a destination to save.




To Set1~Set20

To File DSxxxx.set

5. Press *Save Now* to confirm saving. When completed, a message appears at the bottom of the display.



Setup save to Disk: \DS0001.SET completed!



Note

The file will not be saved if the power is turned Off or the USB drive is taken out before the message ends.

USB File Utility

To edit USB flash drive contents (create/ delete/ rename files and folders) or to set the file path, press *File Utilities*. For details, see 165.



Edit Label

To edit labels for Setup files, press *Edit Label*. For more details on editing labels, see page 150.



Recall

File Type/Source/Destination

Item	Source	Destination
Default Panel Setup	<ul style="list-style-type: none"> Factory installed setting 	<ul style="list-style-type: none"> Current front panel
Reference Waveform	<ul style="list-style-type: none"> Internal memory: Ref1~4 	<ul style="list-style-type: none"> Current front panel
Panel Setup (DSxxxx.set)	<ul style="list-style-type: none"> Internal memory: S1 ~ S20 File system: Disk, USB 	<ul style="list-style-type: none"> Current front panel
Waveform Data (DSxxxx.lsf) (CH1~CH4.lsf, Ref1~Ref4.lsf, Math.lsf)*	<ul style="list-style-type: none"> Internal memory: Wave 1 ~ Wave20 File system: Disk, USB 	<ul style="list-style-type: none"> Reference waveform 1 ~ 4

*Recalled from ALLXXX directories.


Recall Default Panel Settings

Panel Operation 1. Press the *Default Setup* key.



2. The screen will update with the default panel settings.



Setting Contents The following is the default (factory) setting contents.

Acquire	Mode: Sample	XY: OFF
	Sample mode: Sinc	Sample rate: 250MSPS (200MSPS GDS350X)
Display	Mode: Vector	Persistence: Auto
	Waveform intensity: 50%	Graticule intensity: 50%
	Waveform visuals: Gray	Graticule: full 
Channel	Scale: 100mV/Div	CH1: On
	Coupling: DC	Impedance: 1M Ω
	Invert: Off	Bandwidth: full
	Expand: By ground	Position: 0.00V
	Probe: voltage	Probe attenuation: 1x
	Deskew: 0s	
Cursor	Horizontal cursor: Off	Vertical Cursor: Off
Measure	Source1: CH1	Source2: CH2
	Gating: Off	Display: Off
Horizontal	Scale: 10us/Div	
Math	Source1: CH1	Operator: +
	Source2: CH2	Position: 0.00 Div
	Unit/Div: 200mV	Math Off
Test	App: Go-NoGo	
Trigger	Type: Edge	Source: CH1
	Coupling: DC	Alternate: Off
	Rejection: Off	Noise Rejection: Off
	Slope: positive	Level: 0.00V
	Mode: Auto	Holdoff: 10.0ns

Utility	Language: English	Print key: Save
		Ink Saver: Off
Save Recall	Image file format: Bmp	Data file format: LSF

Recall Waveform

- Panel Operation
- (For recalling from an external USB flash drive)
Connect the drive to the front or rear panel USB port.
Note: Only one host connection, front or rear, is allowed at a time.
 - The waveform must be stored in advance. See page 154 for waveform store details.
 - Press the *Save/Recall* key.
 - Press *Recall Waveform* from the bottom menu. The Recall menu appears.
 - Press *From* (internal memory) or *From File* and choose a source to recall from.

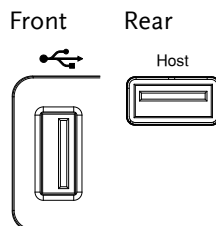


From Wave1~20

From File* DSxxxx.lsf, CH1~CH4.lsf


*Only files in the current file path will be available, this includes files saved in the ALLXXX directories.

6. Press *To* and select the reference waveform to recall to.



To Ref1~4

7. Press *Recall Now* to recall the waveform.



USB File Utility


To edit USB flash drive contents (create/ delete/ rename files and folders) or to set the file path, press *File Utilities*. For details, see page 165.



Recall Setup

Panel Operation

- (For recalling from an external USB flash drive) Connect the drive to the front or rear panel USB port.
Note: Only one host connection, front or rear, is allowed at a time.

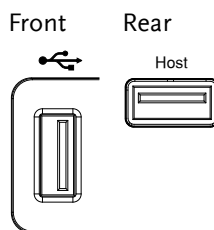

- Press the *Save/Recall* key.



- Press *Recall Setup* from the bottom menu.



- Press *From* (internal memory) or *From File* and choose a source to recall from.




From Set1~20

From File DSxxxx.set (USB, Disk)*

* Only files in the current file path will be available.

5. Press *Recall Now* to confirm recalling. When completed, a message appears at the bottom of the display.

A blue rectangular button with rounded corners and a thin black border. The text "Recall Now" is centered in a black, sans-serif font.An orange rectangular message box with rounded corners and a thin blue border. The text "Setup recalled from Set1!" is centered in a black, sans-serif font.

The file will not be recalled if the power is turned Off or the USB drive is taken out before the message ends.

USB File Utility

To edit USB flash drive contents (create/ delete/ rename files and folders) or to set the file path, press *File Utilities*. For details, see page 165.

A blue rectangular button with rounded corners and a thin black border. The text "File Utilities" is centered in a black, sans-serif font.

Edit Label

To edit labels for Setup files, press *Edit label*. For more details on editing labels, see page 150.

A blue rectangular button with rounded corners and a thin black border. The text "Edit Label" is centered in a black, sans-serif font.

Reference Waveforms



Recall and Display Reference Waveforms

Panel Operation A reference waveform must be stored in advance. See page 154 to store waveforms as reference waveforms.

1. Press the *REF* key on the front panel.





2. Pressing *R1~R4* repeatedly will toggle the corresponding reference waveform OFF/ON.




Turning R1~R4 ON will open the corresponding reference menu.

3. If a reference waveform is ON but not active, its reference menu can be opened by pressing the corresponding *R1~R4* key from the bottom menu.




Vertical
Navigation

Press *Vertical* repeatedly from the side menu to choose to edit the vertical position or Volts/Div. Use the Variable knob to edit the values.



Horizontal
Navigation

Press *Horizontal* repeatedly from the side menu to choose to edit the Time/Div or the horizontal position. Use the Variable knob to edit the value.




View Reference
Waveform Details

Pressing *Ref Details* will display the reference waveform details.



Details Sample Rate, Record Length, Date

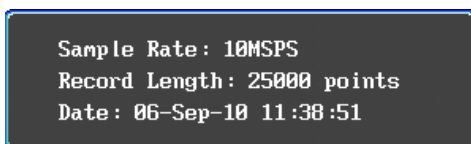

Edit Labels

To edit labels for Setup files, press *Edit labels*. For more details on editing labels, see page 150.



Save Reference
Waveforms

To save reference waveforms, press *Save to File*. For more Details on saving waveforms, see page 146.



FILE UTILITIES


The file utilities are used each time files need to be saved to internal or external memory. The file utilities can create directories, delete directories and rename files. BMP and PNG image files can be previewed in the file system. The File Utilities menu also sets the file path for saving and recalling files from the Save/Recall menu.

File Navigation	167
Create Folder	168
Rename File.....	169
Delete File	171
Copy File to USB	172

File Navigation

The File Utilities menu can be used to choose files or to set the file path for saving/recalling files.

File System

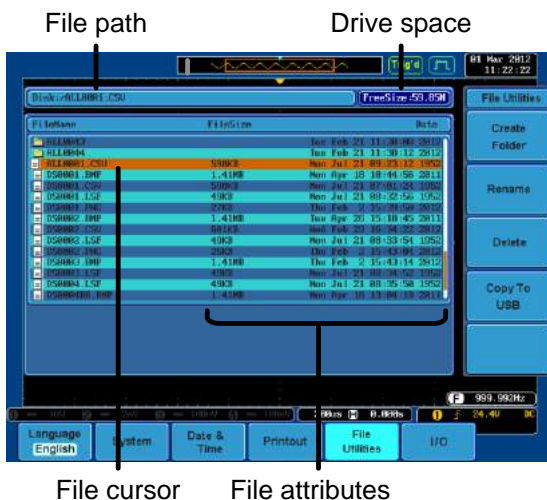


Panel Operation

1. Press the *Utility* key.
2. Press *File Utilities* from the bottom menu.
3. The file system appears.
4. Use the *Variable* knob to move the file cursor up and down.



Use the *Select* key to choose a file or directory or to set the file path.

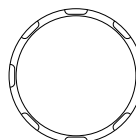

The file path can be set to internal memory or to a directory on a USB memory stick.

Select

Note

Selecting a waveform file will cause that file to be recalled to the currently configured reference waveform.

Create Folder

Panel Operation 1. Press the *Utility* key.

Utility

2. Press *File Utilities* from the bottom menu.

File Utilities

3. Use the variable knob and select key to navigate the file system.




Create Folder

4. Press *Create Folder* to make a new directory at the selected location.

Create Folder

- Use the *Variable* knob to highlight a character.

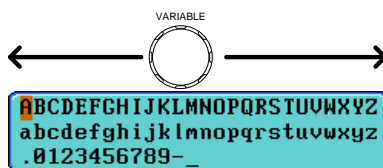

Press *Enter Character* to select a number or letter.

Enter
Character

Press *Back Space* to delete a character.

Back
Space

- Press *Editing completed* to create the folder name.

Editing
Completed

Cancel

Press *Cancel* to cancel the operation.

Cancel

Rename File

- Panel Operation
- Press the Utility key.

Utility


- Press *File Utilities* from the bottom menu.

File
Utilities


- Use the variable knob and select key to choose a file to rename.




4. Press *Rename* when a file is chosen.



5. Use the *Variable* knob to highlight a character.

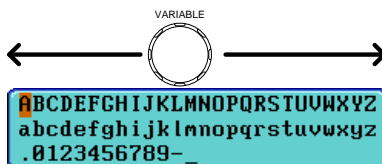


Press *Enter Character* to select a number or letter.



Press *Back Space* to delete a character.



6. Press *Editing completed* to create the folder or file name.



Delete File

Panel Operation 1. Press the *Utility* key.

Utility

2. Press *File Utilities* from the bottom menu.

File
Utilities

3. Use the variable knob and select key to navigate the file system to choose a file.



4. Press *Delete* to delete the selected file.


Delete

5. Press *Delete* again to confirm the deletion.

Delete

Copy File to USB

- Panel Operation 1. Connect a USB drive to the front or rear panel USB port.
Note: Only one host connection, front or rear, is allowed at a time.

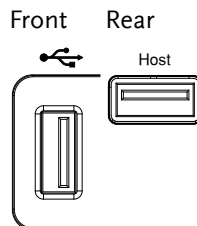

- Panel Operation 2. Press the *Utility* key.



3. Press *File Utilities* from the bottom menu.



4. Use the variable knob and select key to navigate the file system to choose a file from internal memory.



5. Press *Copy to USB* to copy the selected file to the USB drive.



P RINT OUT

Screen images can be printed to some PictBridge compatible printers using the USB device port. The GDS-3000 has a dedicated Print/Save key for quick and easy printing. To reduce the amount of printer ink used for each print, images can be printed using the Ink Saver function.

Screen images can also be printed using the remote control software, FreeWave, downloadable from the GWInstek website.

Printer I/O Configuration


Panel Operation 1. Connect a PictBridge printer to the USB device port on the rear panel.



2. Press the *Utility* key.



3. Press *I/O* from the bottom menu.



4. Press *USB Device Port* from the side menu and select *Printer*.



Print Output

Ensure the USB port has been configured to Printer before trying to print, see page 173.

Panel Operation 1. Press the *Utility* key.




2. Press *Printout* from the bottom menu.




3. On the side menu, press *Function* repeatedly to select Print.



4. The Print led on the screen bezel will be lit when the printout Function is set to *Print*.



5. Press the Print/Save key located on the screen bezel. The display image is printed out.




Ink Saver


To have a white background on the saved or printed display image, press *Ink Saver* repeatedly to toggle Ink Saver On or Off from the side menu.



Ink Saver On

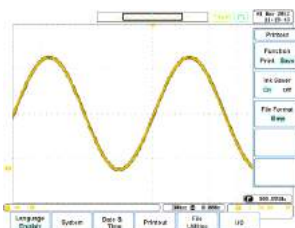

Ink Saver Off

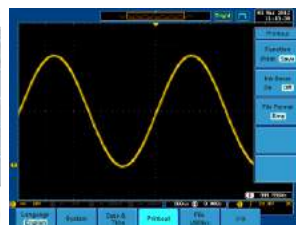

REMOTE CONTROL CONFIG

This chapter describes basic configuration for remote control. For a command list, refer to the programming manual downloadable from GWInstek website, www.gwinstek.com

Interface Configuration	177
Configure USB Interface	177
Configure RS-232C Interface.....	178
Configure the Ethernet Interface.....	179
Configure GPIB Interface.....	182
USB/RS-232C Remote Control Software	183
Web Server.....	183
Web Server Overview	183

Interface Configuration

Configure USB Interface

USB Configuration	PC side connector	Type A, host
	GDS-3000 side connector	Type B, slave
	Speed	1.1/2.0 (high speed)
	USB Class	CDC (communications device class)

Panel Operation 1. Press the Utility key.




2. Press I/O from the bottom menu.



3. Press USB Device Port from the side menu.



4. Press *Computer* from the side menu.



5. Connect the USB cable to the rear panel slave port.



6. When the PC asks for the USB driver, select the USB driver included in the FreeWave software package. The driver file automatically sets the GDS-3000 to a serial COM port. The Freewave software package is downloadable from GDS-3000 product section of the GW Instek website, www.gwinstek.com.

Configure RS-232C Interface

RS-232C Configuration	Connector	DB-9, Male
	Baud rate	2400, 4800, 9600, 19200, 38400, 57600, 115200
	Parity	None, Odd, Even
	Data bit	8 (fixed)
	Stop bit	1, 2


Panel Operation 1. Press the *Utility* key.




2. Press *I/O* from the bottom menu.



3. Press *RS-232C* from the side menu.



4. Use the side menu to set the Baud Rate.



Baud Rate 2400, 4800, 9600, 19200, 38400, 57600, 115200

5. Press *Stop Bit* to toggle the number of stop bits.



Stop Bits 1, 2

6. Press *Parity* to toggle the parity.




Parity Odd, Even, None


7. Press *Save Now* to save the settings.



8. Connect the RS-232C cable to the rear panel port: DB-9 male connector. For a functionality check, see page 183.

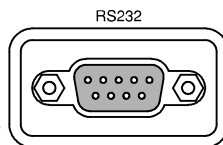


Pin Assignment

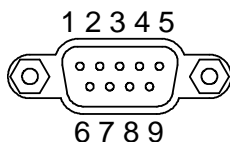

- 2: RxD (Receive data)
- 3: TxD (Transmit data)
- 5: GND
- 4, 6 ~ 9: No connection

PC Connection

Use the Null Modem connection as in the below diagram.

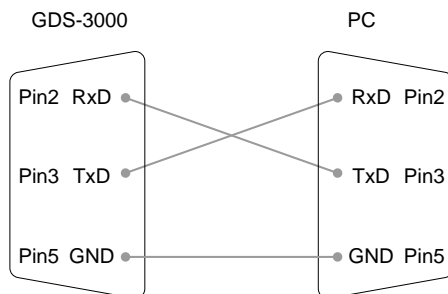

Configure the Ethernet Interface

Ethernet
Configuration

MAC Address	Domain Name
Instrument Name	DNS IP Address
User Password	Gateway IP Address
Instrument IP Address	Subnet Mask
	HTTP Port 80 (fixed)

Background The Ethernet interface is used for remote control over a network.

Panel Operation 1. Press the *Utility* key.




2. Press *I/O* from the bottom menu.



3. Press *Ethernet* from the side menu.




4. Set *DHCP/BOOTP* to *On* or *Off* from the side menu.




Note

IP addresses will automatically be assigned with DHCP/BOOTP set to on. For Static IP Addresses, DHCP/BOOTP should be set to off.

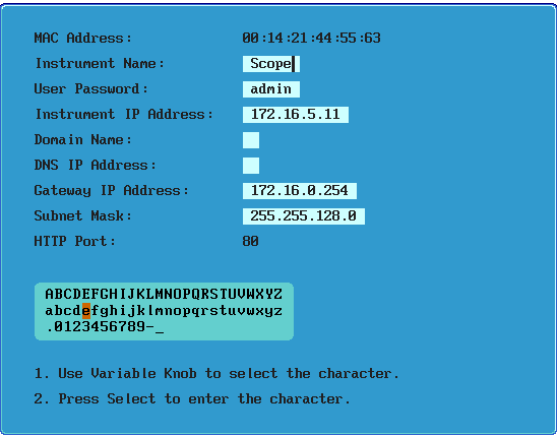


5. Use the *Up* and *Down* arrows on the side menu to navigate each Ethernet configuration item.

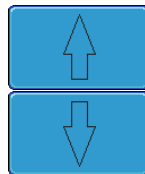

Items MAC Address, Instrument Name, User Password, Instrument IP Address, Domain Name, DNS IP Address, Gateway IP Address, Subnet Mask

Note: HTTP Port is fixed at 80.

6. Use the Variable knob to highlight a character and use the Select key to choose a character.

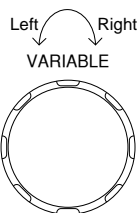

Press *Backspace* to delete a character.



7. Connect the Ethernet cable to the rear panel of the GDS-3000.



Configure GPIB Interface

To use GPIB, the optional GPIB to USB (GUG-001) adapter must be used. The GPIB address can be configured for the GUG-001 from the utility menu. See the GUG-001 user manual for more information.

Configure GPIB

1. Insert the GUG-001 USB cable into the rear panel USB device port.



2. Press the *Utility* key.



3. Press *I/O* from the bottom menu.




4. Press USB Device Port from the side menu.



5. Press *GPIB* from the side menu.



6. Use the variable knob to set the GPIB Address from the side menu.



Range 1 ~ 30

- GPIB Constraints**
- Maximum 15 devices altogether, 20m cable length, 2m between each device
 - Unique address assigned to each device
 - At least 2/3 of the devices turned On
 - No loop or parallel connection

USB/RS-232C Remote Control Software

Terminal Application (USB/RS-232C)	Invoke the terminal application such as telnet. For RS-232C, set the COM port, baud rate, stop bit, data bit, and parity accordingly.
------------------------------------	---

To check the COM port No, see the Device Manager in the PC. For WinXP, Control panel → System → Hardware tab.

Functionality Check	Key in this query command via the terminal. *idn?
---------------------	--

This should return the Manufacturer, Model number, Serial number, and Firmware version in the following format.

GW, GDS-3152, EK0000001, V1.00

Note: remember to use the appropriate terminal character when entering the command.

PC Software (USB only)	The proprietary PC software FreeWave is downloadable from the GWInstek website for remote control.
------------------------	--

Web Server

Web Server Overview

Background	<p>The GDS-3000 has an inbuilt web server that can be used to:</p> <ul style="list-style-type: none">• view the system information (Welcome Page)• set/view the network configuration settings (Network Configuration)• remotely view the current display image on the unit (Get Display Image)
------------	---

System
Information:

- Manufacturer
- Serial Number
- Firmware version
- Hostname
- Domain name
- IP Address
- Subset Mask
- DNS
- MAC Address
- DHCP State



[Visit Our Site](#)

[Support](#) | [Contact Us](#)

Welcome Page

Network Configuration

Get Display Image

**GDS-3000 Series
Web Control Pages**

Thanks For Your Using

Use the left menu
to select the features you need

More How-to
Please refer to user manual



System Information

Manufacturer:	GW
Serial Number:	P930116
Description:	GW/GDS-3354
Firmware Version:	V1.08
Hardware:	G-30116
Domain Name:	
IP Address:	172.16.20.66
Subnet Mask:	255.255.128.0
Gateway:	172.16.0.254
DNS:	172.16.1.248
MAC Address:	02:50:ad:25:21:21
DHCP State:	ON

Copyright 2010 © Good Will Instruments Co., Ltd All Rights Reserved.

Network
Configuration

- Hostname
- Domain name
- IP Address
- Subnet mask
- Gateway
- DNS
- DHCP State



[Visit Our Site](#)

[Support](#) | [Contact Us](#)

Welcome Page

Network Configuration

Get Display Image


Network Configuration

Hostname:	G-30116
Domain Name:	
IP Address:	172.16.20.66
Subnet Mask:	255.255.128.0
Gateway:	172.16.0.254
DNS:	172.16.1.248
DHCP State:	<input checked="" type="radio"/> ON <input type="radio"/> OFF

Password:

Get Display Image

- Current display image

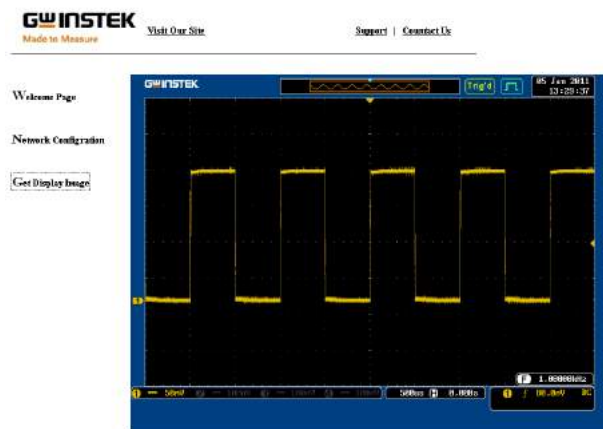

Panel Operation 1. Configure the Ethernet interface. Page 179

2. Enter the IP address of the GDS-3000 unit into the address bar of a web browser.

For example:

http://172.16.20.255

3. The GDS-3000 web browser welcome page appears.



Visit Our Site

Support | Contact Us

Welcome Page

Network Configuration

Get Display Image

GDS-3000 Series Web Control Pages

Thanks For Your Using

Use the left menu to select the features you need.

More How-to
Please refer to user manual.



System Information

Manufacturer:	GW
Serial Number:	P930116
Description:	GW/GDS-3354
Firmware Version:	V1.08
Hostname:	G-30116
Domain Name:	
IP Address:	172.16.20.66
Subnet Mask:	255.255.128.0
Gateway:	172.16.0.254
DNS:	172.16.1.248
MAC Address:	62:50:ad:25:21:21
DECP State:	ON

Copyright 2010 Good Will Instrument Co., Ltd. All Rights Reserved.

M AINTENANCE

Three types of maintenance operations are available: signal path compensation, vertical accuracy calibration and probe compensation. Run these operations when using the GDS-3000 in a new environment. The maintenance chapter also includes instruction on how to install and uninstall optional software applications.

How to use SPC function	187
Vertical Accuracy Calibration	188
Probe Compensation	190
Activating Optional Software	191
Uninstalling Optional Software	192


How to use SPC function

Background Signal Path Compensation (SPC) is used to compensate the internal signal path due to ambient temperature. SPC is able to optimize the accuracy of the oscilloscope with respect to the ambient temperature.

Panel Operation 1. Press the *Utility* key.



2. Press *System* from the bottom menu.



3. Press *SPC* from the side menu. A message showing a brief introduction to SPC appears on the screen.



Note

Disconnect all probes and cables from all channels before calibrating.

4. Press *Start* on the side menu to start SPC calibration.



Note

The DSO needs to be warmed up for at least 30 minutes before using the SPC function.


5. The SPC Calibration will proceed one channel at a time, from channel 1 to channel 4.

Vertical Accuracy Calibration


Panel Operation 1. Press the *Utility* key.




2. Press *System* from the bottom menu.




3. Press *more 1 of 2* from the side menu.



4. Press *Self Cal* on the side menu.




5. Press *Vertical* on the side menu.



6. A message appears to "Set CAL to CH1, then press F1".

7. Connect the calibration signal from the rear panel to the Channel1 input with a BNC cable.

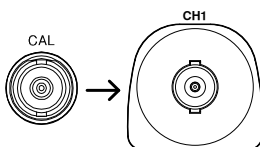



Note

In order to avoid noise interference, it is best if you connect the BNC input channels (front) & the CAL BNC (rear) with an isolated BNC-to-BNC coaxial cable such as the RG400 BNC test lead (Part No:4241-10200201) or a normal 5D2V BNC-to-BNC coaxial cable when performing the Vertical Accuracy Calibration.

8. Press *Vertical* again after connecting CAL to the channel 1 input.

Vertical

The calibration for Channel1 starts and ends automatically, in less than 5 minutes. A message is displayed when the calibration procedure has ended.


9. Repeat the above step for Channel 2, 3* and 4* when prompted.

*4 channel models.

10. When the calibration for all channels has completed, the display goes back to the default state.

Probe Compensation


- Panel Operation
1. Connect the probe between the Channel1 input and the probe compensation output (2Vp-p, 1kHz square wave) on the front panel. Set the probe attenuation to x10 (GDP probes are fixed at x10).

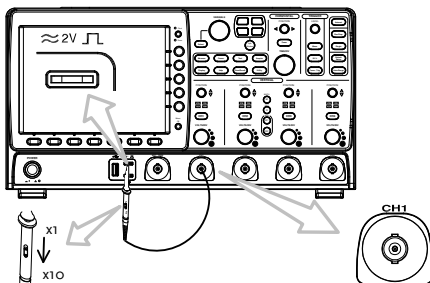


2. Press the *CH1* key to activate CH1.



3. Set the *Coupling* to DC from the bottom menu.




4. Set *Impedance* to 1MΩ from the bottom menu.



5. Set the Probe attenuation to *Voltage, 10X*.


Page 122

6. Press the *Autoset* key. The compensation signal appears on the display.





7. Press the *Display* key, then set the display type to *Vector*.



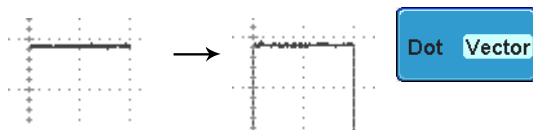

8. Turn the adjustment point on the probe to make the waveform as square as possible.

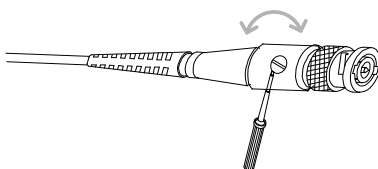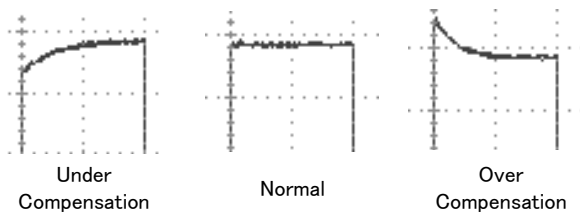

Activating Optional Software

Background

The GDS-3000 has power analysis software (page 94), serial bus decoding software (page 95) and other GW Instek applications as optional extras. GW Instek supplies both free-of-charge and paid-for applications.

Note: An activation key is required to activate each optional software application.

For the latest files and information regarding the optional software packages, see the GW Instek website: www.gwinstek.com


Uninstalling Optional Software

Background Optional software packages such as the power analysis software or the serial bus decode software can be uninstalled from the system menu.


Panel Operation 1. Press the *Utility* key.




2. Press *System* from the bottom menu.



3. Press more 1 of 2 from the side menu.



4. Press *Option Uninstall* on the side menu.



5. Select the optional software packages that you wish to uninstall from the side menu.



F

FAQ

- I connected the signal but it does not appear on the display.
- I want to remove the (Measurement result / FFT result / Help contents) from the display.
- The waveform does not update (frozen).
- The probe waveform is distorted.
- Autoset does not catch the signal well.
- I can't save files to the internal memory.
- The display image printout is too dark on the background.
- The date and time setting are not correct.
- The accuracy does not match the specification.
- When trying to perform Vertical Accuracy Calibration, error messages always appear.

I connected the signal but it does not appear on the display.

Make sure you have activated the channel by pressing the Channel key (the channel key lights up).

I want to remove the (Measurement result / FFT result / Help contents) from the display.

To clear automatic measurement results, press the Measure key, Select Remove Measurement and choose Remove All. See page 71.

To clear individual measurements from the screen, press the Measure key, select Display All and choose Display None. See page 73.

To clear FFT result, press the Math key twice. See page 81 for details.

To clear Help result, press the Help key again. See page 54 for details.

The waveform does not update (frozen).

Press the Run/Stop key to unfreeze the waveform. See page 58 for details.

If this does not help, the trigger mode might be set to Single. Press the Single key to exit Single mode. See page 58 for trigger setting details.

The probe waveform is distorted.

You might need to compensate the probe. The input impedance may also have to be changed to suit your probe. For details, see page 190. Note that the frequency accuracy and duty factor are not specified for the probe compensation waveform and therefore it should not be used for other reference purposes. Also remember to set the impedance to 1M Ω .

Autoset does not catch the signal well.

The Autoset function cannot catch signals under 30mV or 20Hz. Please use the manual operation. See page 57 for Autoset details.

I can't save files to the internal memory.

If a USB stick is inserted into one of the USB slots and you wish to save to the scope internal memory, press the *Utilities* key and set the file path to internal memory. Note however that image files can only be saved to USB when using the Print key.

The display image printout is too dark on the background.

Use the Ink Saver function which reverses the background color. For details, see page 173.

The date and time setting are not correct.

For date and time setting details, please see page 143. If it does not help, the internal battery controlling the clock might be worn out. Contact your dealer or GWInstek.

The accuracy does not match the specification.

Make sure the device is powered On for at least 30 minutes, within +20°C~+30°C. This is necessary to stabilize the unit to match the specification.

When trying to perform Vertical Accuracy Calibration, error messages always appear.

In order to avoid noise interference, it is best if you connect the BNC input channels (front) & the CAL BNC (rear) with an isolated BNC-to-BNC coaxial cable such as the RG400 BNC test lead (Part No:4241-10200201) or a normal 5D2V BNC-to-BNC coaxial cable when performing the Vertical Accuracy Calibration.

For more information, contact your local dealer or GW Instek at www.gwinstek.com/marketing@goodwill.com.tw.

A PPENDIX

GDS-3000 Specifications

The specifications apply when the GDS-3000 is powered on for at least 30 minutes under +20°C~+30°C.

Model-specific

GDS-3152	Channels	2 + Ext
	Bandwidth	DC ~ 150MHz (–3dB)
	Rise time	2.3ns
GDS-3154	Channels	4 + Ext
	Bandwidth	DC ~ 150MHz (–3dB)
	Rise time	2.3ns
GDS-3252	Channels	2 + Ext
	Bandwidth	DC ~ 250MHz (–3dB)
	Rise time	1.4ns
GDS-3254	Channels	4 + Ext
	Bandwidth	DC ~ 250MHz (–3dB)
	Rise time	1.4ns
GDS-3352	Channels	2 + Ext
	Bandwidth	DC ~ 350MHz (–3dB)
	Rise time	1ns
GDS-3354	Channels	4 + Ext
	Bandwidth	DC ~ 350MHz (–3dB)
	Rise time	1ns
GDS-3502	Channels	2 + Ext
	*Bandwidth	DC ~ 500MHz (–3dB)
	Rise time	700ps
GDS-3504	Channels	4 + Ext
	*Bandwidth	DC ~ 500MHz (–3dB)
	Rise time	700ps

The bandwidth of the 75Ω input impedance is limited to 150MHz only.

*The bandwidth verification is based on Vpp of five major vertical graticule divisions

Common

Vertical	Resolution	8 bit
	Sensitivity	@1M Ω : 2mV~5V/div @50/75 Ω : 2mV~1V/div
	Input Coupling	AC, DC, GND
	Input Impedance	1M Ω // 15pF
	DC Gain	$\pm 3\%$ full scale
	Accuracy	
	Polarity	Normal & Invert
	Maximum Input Voltage	@1 M Ω : 300Vrms, CAT I @50/75 Ω : 5 Vrms max
	Offset Position	2mV/div ~ 100mV/div : $\pm 0.5V$
	Range	200mV/div ~ 5V/div : $\pm 25V$
	Bandwidth Limit	Dependent on the oscilloscope bandwidth (BW. BW=150: Full/20MHz BW=250: Full/20MHz/100MHz BW=350: Full/20MHz/100MHz/200MHz BW=500: Full/20MHz/100MHz/200MHz/350MHz
	Waveform Signal Process	Add, subtract, multiply, and divide waveforms, FFT, FFTrms, Integration*, Differentiation* *: App installation required. FFT:Spectral magnitude. Set FFT Vertical Scale to Linear RMS or dBV RMS, and FFT Window to Rectangular, Hamming, Hanning, or Blackman-Harris.
Trigger	Sources	CH1, CH2, CH3, CH4, Line, EXT
	Modes	Auto (supports Roll Mode for 100 ms/div and slower), Normal, Single Sequence
	Type	Edge, Pulse Width(Glitch), Video, Pulse Runt, Rise & Fall(Slope), Alternate, Event-Delay(1~65535 events), Time-Delay(Duration)(10ns~10s), I ² C*, SPI*, UART* *optional Runt:Trigger on a pulse that crosses one threshold but fails to cross a second threshold before crossing the first again. SPI (optional):Trigger on SS, MOSI, MISO, or MOSI and MISO on SPI buses.

		I ² C (optional): Trigger on Start, Repeated Start, Stop, Missing ACK, Address (7 or 10 bit), Data, or Address and Data on I ² C buses.
		UART (optional): Trigger on Tx Start Bit, Rx Start Bit, Tx End of Packet, Rx End of Packet, Tx Data, Rx Data, Tx Parity Error, and Rx Parity Error.
	Holdoff range	10ns to 10s
	Coupling	AC, DC, LF rej., HF rej., Noise rej.
	Sensitivity	GDS-31XX ~ GDS-33XX: DC ~ 50MHz Approx. 1div or 10mV 50MHz ~ 150MHz Approx. 1.5div or 15mV 150MHz ~ 350MHz Approx. 2div or 20mV GDS-350X: DC ~ 50MHz Approx. 1div or 1.0mV 50MHz ~ 150MHz Approx. 1.5div or 15mV 150MHz ~ 350MHz Approx. 2div or 20mV 350MHz ~ 500MHz Approx. 2.5div or 25mV
External Trigger	Range	±15V
	Sensitivity	GDS-31XX ~ GDS-33XX: DC ~ 150MHz Approx. 100mV 150MHz ~ 250MHz Approx. 150mV 250MHz ~ 350MHz Approx. 150mV 350MHz ~ 500MHz Approx. 200mV
	Input Impedance	1MΩ ±3%, ~16pF
Horizontal	Timebase Range	GDS-31XX, GDS-32XX, GDS-33XX: 1ns/div ~ 100s/div (1-2.5 increments); ROLL : 100ms/div ~ 100s/div GDS-350X: 1ns/div ~ 100s/div (1-2.5-5 increments); ROLL : 100ms/div ~ 100s/div
	Pre-trigger	10 div maximum
	Post-trigger	1000 div maximum. The number of divisions depends on the time division.
	Timebase Accuracy	±20 ppm over any ≥1 ms time interval
X-Y Mode	X-Axis Input	Channel 1; Channel 3
	Y-Axis Input	Channel 2; Channel 4
	Phase Shift	±3° at 100kHz
Signal Acquisition	Real Time	150/250/300MHz models: 5GSa/s (MAX)
	Sample Rate	150/250MHz models with 2CH: 2.5GSa/s 500MHz models: 4GSa/s (MAX), 2GSa/s per channel

	ET Sample Rate	100GSa/s maximum for all models
	Record Length	25k points / channel
	Acquisition Mode	Normal, Average, Peak Detect, High Resolution, Single Sequence
	Peak (Glitch) Detection	2ns (MAX) Normal: Acquire sampled values. Average: From 2 to 256 waveforms included in average. Peak Detect: Captures glitches as narrow as 2 ns at all sweep speeds Hi Res: Real-time boxcar averaging reduces random noise and increases vertical resolution
Cursors and Measurement	Cursors	Amplitude, Time, Gating available
	Automatic Measurement	28 sets: Vpp, Vamp, Vavg, Vrms, Vhi, Vlo, Vmax, Vmin, Rise Preshoot/Overshoot, Fall Preshoot/Overshoot, Freq, Period, Rise Time, Fall Time, Positive Width, Negative Width, Duty Cycle, and nine different delay measurements (FRR, FRF, FFR, FFF, LRR, LRF, LFR, LFF, Phase)
	Cursors measurement	Voltage difference between cursors (ΔV) Time difference between cursors (ΔT)
	Auto counter	6 digits, range from 2Hz minimum to the rated bandwidth
Power Measurements (Option)	Power Quality Measurements	V RMS, I RMS, True Power, Apparent Power, Reactive Power, Frequency, Power Factor, Phase Angle, V Crest Factor, I Crest Factor, (+)V Peak, (-)V Peak, (+)I Peak, (-)I Peak, DC Voltage, DC Current, Impedance, Resistance, Reactance
	Harmonics	Frequency (Hz), Magnitude (%), Mag. RMS (A), Phase (°), Limit (A), Limit (%), Pass Fail, Max all , Windows (A), 200% Limit, POHC Limit, THD-F, THD-R, RMS, Overall, POHC, POHL, Input Power, Power Factor, Fundamental Current, Harmonic 3, Harmonic 5
	Ripple Measurements	Ripple, Noise
	In-rush current	First peak, Second peak
Control Panel Function	Autoset	Single-button, automatic setup of all channels for vertical, horizontal and trigger systems, with undo autoset
	Auto-Range	allow you to quickly move from test point to test point without having to reset the oscilloscope for each test point
	Save Setup	20 sets

	Save Waveform	24 sets
Display	TFT LCD Type	8" TFT LCD SVGA color display
	Display Mode	YT, XY
	Display Resolution	800 horizontal × 600 vertical pixels (SVGA)
	Interpolation	Sin(x)/x & Equivalent Time Sampling
	Waveform	Dots, vectors, variable persistence, infinite persistence
	Display Graticule	8 x 10 divisions
	Waveform Update Rate	3500 waveforms per second maximum
Interface	RS232C	DB-9 male connector
	USB Port	2 sets USB 2.0 High-speed host port 1 set USB High-speed 2.0 device port
	Ethernet Port (LAN)	RJ-45 connector, 10/100Mbps
	SVGA Video Port	DB-15 female connector, monitor output for display on SVGA monitors
	GPIO	GPIO to USB adapter (Option)
	Go-NoGo BNC	5V Max, 10mA CMOS open collector output
	Internal flash disk	64MB
	Kensington Style Lock	Rear-panel security slot connects to standard Kensington-style lock.
Power Source	Line output	3.5mm stereo jack for Go/NoGo audio alarm
	Line Voltage Range	AC 100V ~ 240V , 48Hz ~ 63Hz , Auto selection
	Power Consumption	96VA
Miscellaneous	Multi-language menu	Available
	On-line help	Available
	Time clock	Time and Date ,Provide the Date/Time for saved data
Dimensions	400W X 200H X 130D, Approx. 4kg	

Probe Specifications


Model-specific Probe Specifications

GTP-151R	Applicable to	GDS-3152 / GDS-3154
	Bandwidth	DC ~ 150MHz
	Rise time	2.3ns
	Input	~12pF
	Capacitance	
	Compensation Range	10 ~ 30pF
GTP-251R	Applicable to	GDS-3252 / GDS-3254
	Bandwidth	DC ~ 250MHz
	Rise time	1.4ns
	Input	~12pF
	Capacitance	
	Compensation Range	10 ~ 30pF
GTP-351R	Applicable to	GDS-3352 / GDS-3354
	Bandwidth	DC ~ 350MHz
	Rise time	1.0ns
	Input	~12pF
	Capacitance	
	Compensation Range	10 ~ 30pF
GTP-501R	Applicable to	GDS-3502 / GDS-3504
	Bandwidth	DC ~ 500MHz
	Rise time	0.7ns
	Input	~11.5pF @ 100MHz
	Capacitance	
	Compensation Range	8 ~ 20pF

Common Probe Specifications

Position x 10	Attenuation Ratio	10:1 (fixed) with readout pin
	Input Resistance	10MΩ when used with 1MΩ input oscilloscope
	Maximum Input Voltage	500V CAT I, 300V CAT II derating with frequency
Operating Condition	Temperature	−0°C ~ 50°C
	Relative Humidity	≤85% @35°C
Safety Standard	EN61010-031 CAT II	

GDS-3000 Dimensions

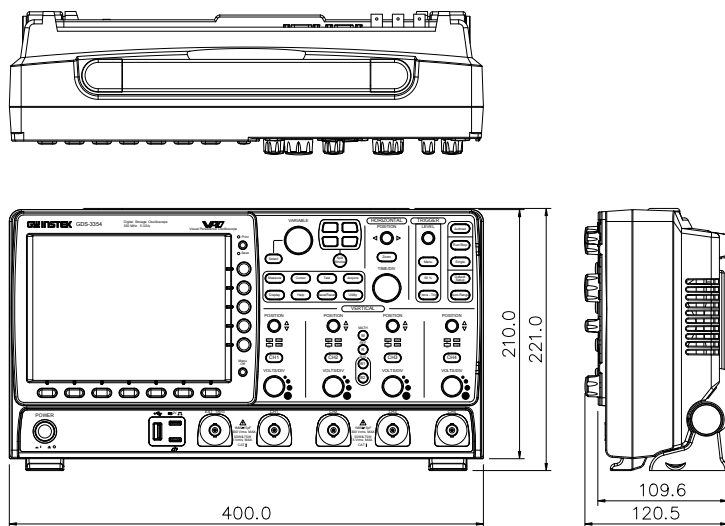

Declaration of Conformity

We

GOOD WILL INSTRUMENT CO., LTD.

declare that the below mentioned product

Type of Product: **Digital Storage Oscilloscope**

Model Number: **GDS-3502, GDS-3152, GDS-3252, GDS-3352**

GDS-3504, GDS-3154, GDS-3254, GDS-3354

are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to Electromagnetic Compatibility (2014/30/EU) and Low Voltage Directive (2014/35/EU).

For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Directive, the following standards were applied:

◎ EMC	
EN 61326-1: EN 61326-2-1:	Electrical equipment for measurement, control and laboratory use -- EMC requirements (2013)
Conducted & Radiated Emission EN 55011: 2009+A1:2010	Electrical Fast Transients EN 61000-4-4: 2012
Current Harmonics EN 61000-3-2: 2014	Surge Immunity EN 61000-4-5: 2006
Voltage Fluctuations EN 61000-3-3: 2013	Conducted Susceptibility EN 61000-4-6: 2014
Electrostatic Discharge EN 61000-4-2: 2009	Power Frequency Magnetic Field EN 61000-4-8: 2010
Radiated Immunity EN 61000-4-3: 2006 +A1:2008+ A2:2010	Voltage Dip/ Interruption EN 61000-4-11: 2004

◎ Safety

Low Voltage Equipment Directive 2014/35/EU	
Safety Requirements	EN 61010-1: 2010 (Third Edition) EN 61010-2-030: 2010 (First Edition)

GOOD WILL INSTRUMENT CO., LTD.

No. 7-1, Jhongsing Road, Tucheng Dist., New Taipei City 236, Taiwan

Tel: +886-2-2268-0389

Fax: +866-2-2268-0639

Web: www.gwinstek.com

Email: marketing@goodwill.com.tw

GOOD WILL INSTRUMENT (SUZHOU) CO., LTD.

No. 521, Zhujiang Road, Snd, Suzhou Jiangsu 215011, China

Tel: +86-512-6661-7177

Fax: +86-512-6661-7277

Web: www.instek.com.cn

Email: marketing@instek.com.cn

GOOD WILL INSTRUMENT EURO B.V.

De Run 5427A, 5504DG Veldhoven, The Netherlands

Tel: +31(0)40-2557790

Fax: +31(0)40-2541194

Email: sales@gw-instek.eu

INDEX

2-4 channel differences.....	11	status indicator.....	27
AC coupling	117	Cleaning the instrument	7
AC Priority mode	58	Control panel function	
AC Priority mode	60	specification.....	199
Acquisition	99	Convention	
indicator.....	26	menu tree	38
Sampling mode.....	103	Conventions.....	32
specification.....	198	Coupling mode.....	117
XY mode	101	Cursor	
APP.		horizontal.....	75
Go-NoGo	89	specification.....	199
overview	86	vertical.....	78
run	86	Cycle time measure.....	68
uninstall	87	Date setting.....	143
Auto trigger	126	indicator	26
Automatic measurement		DC coupling.....	117
display all	73	Declaration of conformity	204
gated mode.....	72	Default setup	159
individual mode	70	contents	52, 148, 160
overview	67	effect on channel	57
remove measurement.....	71	Delay measure.....	69
Auto-range.....	59	Delay trigger.....	133
AC Priority mode	60	Deskew	123
exception.....	60	Dimensions	
Fit Screen mode	60	diagram	203
Autoset.....	57	specification.....	200
AC Priority mode	58	Display	
effect on channel	57	diagram	25
exception.....	58	specification.....	200
Fit Screen mode	58	Disposal instructions	8
Average voltage measure	68	Dots.....	105
Bandwidth filter.....	119	Download information.....	16
Blackman window	82	Duty cycle measure	68
Built-in help.....	54	Edge Trigger	131
Buzzer	143	EN61010	
Calibration, accuracy resolution.....	188	measurement category	6
Caution symbol.....	5	pollution degree	7
Channel	56	Environment	

safety instruction.....	7	Image file format.....	146
Equivalent time sampling	104	Impedance	118
Erase memory	142	Initialization	30
Ethernet		Input frequency indicator.....	26
interface.....	179	Intensity	106
Expand by ground/center	120	color.....	108
External trigger.....	126	gray.....	108
input terminal.....	22	Interface	177
specification.....	198	specification.....	200
Falling time measure.....	68	Invert waveform	118
FAQ.....	193	Keys overview.....	18
FFT.....	84	Labels	150
horizontal cursor	76	Language selection	141
Overview.....	81	List of features.....	12
vertical cursor	79	Logic trigger	139
File		Low voltage measure.....	68
copy.....	172	Math	81
create folder	168	basic.....	82
delete.....	171	FFT.....	84
rename.....	169	Memory bar	
File navigation	167	indicator	26
File path	167	Menu on/off.....	110
Firmware version	142	Miscellaneous	
First time use.....	30	specification.....	200
Fit Screen mode	58	Model difference.....	11
Fit Screen mode	60	Normal trigger	126
Frequency measure	68	NTSC	128
Front panel diagram	17	On-screen help	54
Go-NoGo	89	Optional software	
circuit diagram	93	activation	191
timing.....	92	uninstall	192
GPIB		Overshoot voltage measure.....	68
interface.....	182	Package contents.....	16
Ground		PAL.....	128
coupling.....	117	Pc software download.....	16
symbol	5	PC software download.....	183
terminal	22	Peak voltage measure.....	67
Hamming window	82	Persistence	106
Hanning window	81	Power Analysis	94
High voltage measure.....	68	overview	94
Holdoff.....	100, 130	Power measurements	
Horizontal		specification.....	199
basic operation.....	62	Power on/off	
position.....	111	safety instruction	7
scale.....	112	Power source	
specification	198	specification.....	200

Preshoot voltage measure.....	68	Service operation	
Printing		about disassembly.....	6
connection	173	contact	195
ink saver	175	Setup	
print/save key	174	default contents.....	52
Printing	173	file format.....	148
Probe		Signal path comensation	187
attenuation level	122	Single trigger mode	126
attenuation type.....	121	with run/stop.....	61
deskew	123	Software activation	191
package list.....	16	SPC.....	187
specification.....	201	Specifications	196
Probe compensation	190	Split Window	
Program manual download	16	active window	66
Pulse runt trigger.....	137	operation.....	65
Pulse time measure.....	68	reference position.....	66
Pulse width trigger.....	134	Spreadsheet file format	147
Real time sampling.....	104	Stop icon.....	61
Rear panel diagram	23	System information.....	141
Recall	159	Tilt stand	28
default setup	159	Time setting	143
reference	164	indicator	26
setup.....	161, 162	Trigger.....	124
waveform.....	161	delay	133
Rectangular window	82	edge	131
Reduce menu.....	34	holdoff.....	130
Remote control	176	indicator	26
interface configuration.....	177	Logic	139
webserver	183	mode.....	131
Rising time measure	68	parameters	126
Roll mode.....	113	pulse runt.....	137
RS-232C		pulse width.....	134
interface	178	single trigger with run/stop	61
Run/stop	61	specification.....	197
Run/Stop	110	status indicator.....	27
horizontal position	111	video.....	136
Horizontal scale.....	112	UK power cord	9
Save.....	152	Uninstall applications.....	87
image.....	153	Uninstall optional software	192
print/save key	154	USB	
setup.....	157	driver download	16
waveform.....	156	remote control interface	177
SECAM.....	128	Vectors.....	105
Serial bus		Vertical	116
overview	95	accuracy calibration	188
Serial Bus	95	basic operation	64
Serial number	142	position.....	116

scale.....	116	invert waveform	118
specification	197	roll mode.....	113
Video trigger	136	zoom mode.....	114
Warning symbol	5	Waveform color	25
Waveform		Waveform file format.....	146
data contents.....	147	XY	
file contents	147	specification.....	198
how to recall.....	161	Zoom waveform	114
how to save	156		